


Lubricate Rear Axle Bearings

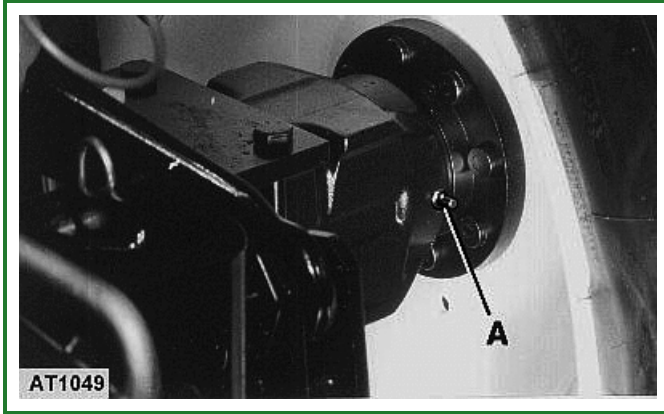


AT1049-UN: Lubricate Rear Axle Bearings


Lubricate rear axle fittings (A-both sides) with several strokes of multipurpose grease (see section “Fuel, Lubricants and Coolant”).

AT,5SOM,113-19-01OCT96

Check Hoses and Hose Clamps for Tightness

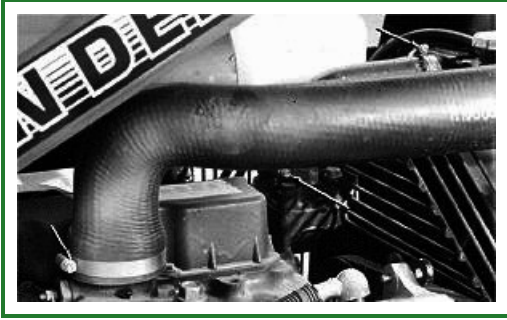

M46981-UN: Check Hoses and Hose Clamps

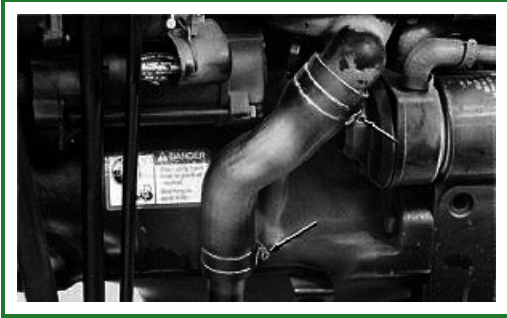

M46982-UN: Check Hoses and Hose Clamps

Check the following systems hose clamps for tightness:

- Air Cleaner to engine intake or turbocharger
- Cooling
- Hydraulics
- Fuel

Check all hoses for cracks which could cause leaks or possible failure. Replace as necessary.

MX,LMIP,ZA2-19-24JUL95