


Drain Water and Sediment from Fuel Tank

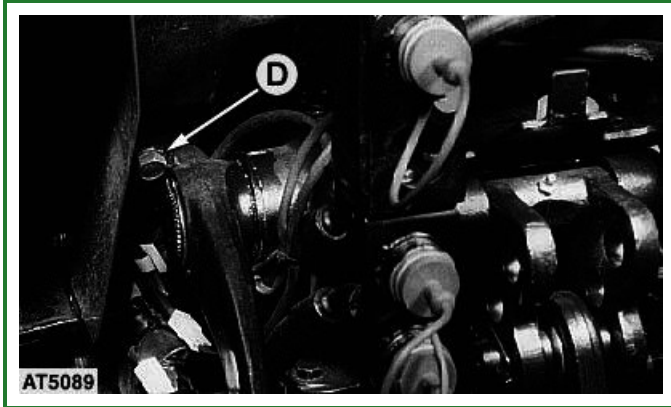

AT5089-UN: Fuel Tank Fitting


Open fuel tank fitting (D) to bleed accumulated moisture and sediment from the fuel tank. Tighten fitting when clear fuel runs from fitting.

NOTE:

Place a small container under drain fitting to catch draining fuel.

AT,5NOM,124-19-1997/09/01

Lubricate Rear Axle Bearings

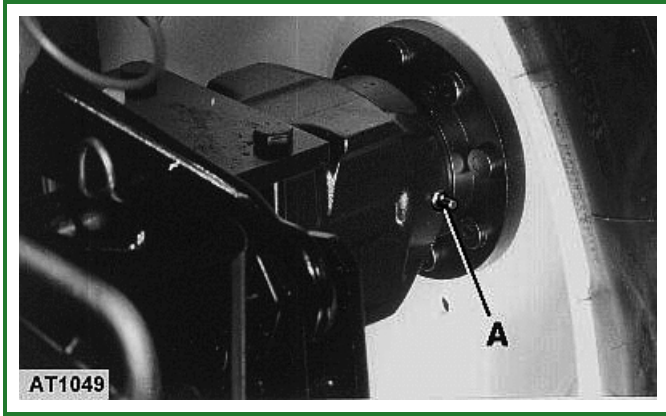

AT1049-UN: Rear Axle Bearings

Lubricate rear axle fittings (A-both sides) with several strokes of multipurpose grease (see section “Fuel, Lubricants and Coolant”).

AT,5SOM,113-19-1996/10/01