


Drain Water and Sediment from Fuel Tank

⚠ CAUTION:

Never open the fuel system when engine is hot. Handle fuel with care, it is highly flammable. Do not replace fuel filter while smoking or when near open flame or sparks.

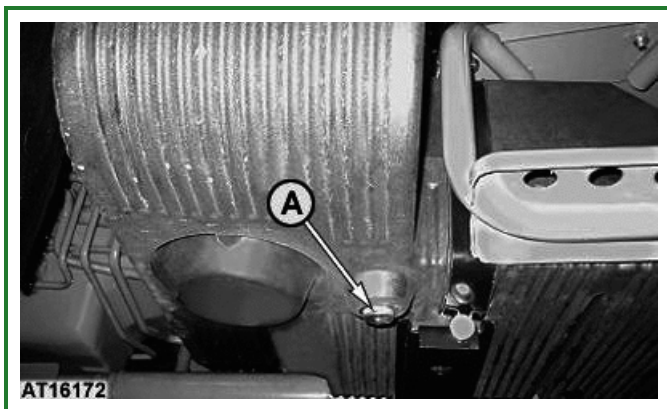

AT16172-UN: Fuel tank drain screw


Open fuel tank drain screw (A) to bleed accumulated moisture and sediment from the fuel tank. Tighten fitting when clear fuel runs from fitting.

NOTE:

Place a small container under drain screw to catch draining fuel.

OULXA64,0000BF4-19-20030521

Replace Fuel Filter

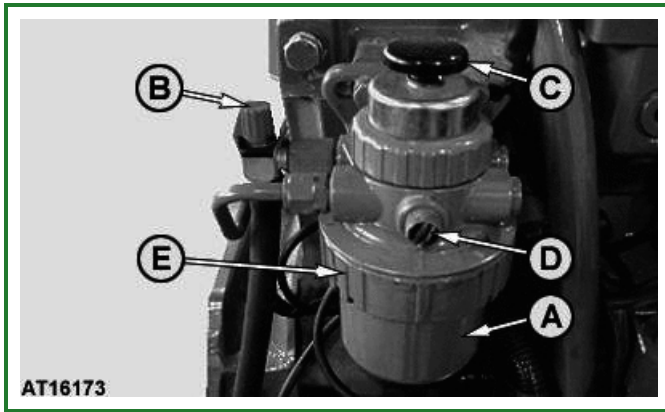

AT16173-UN: Fuel filter element

LEGEND:

- A - Fuel filter element
- B - Fuel shut-off valve
- C - Priming pump
- D - Bleed screw
- E - Retaining ring

⚠ CAUTION:

Never open the fuel system when engine is hot. Handle fuel with care, it is highly flammable. Do not replace fuel filter while smoking or when near open flame or sparks.

Replace fuel filter element (A) at least once a year.

1. Remove right-hand side panel.
2. Close fuel shut-off valve (B).
3. Remove retaining ring (E) and filter.
4. Install new filter with retaining ring, hand tighten.
5. Open fuel shut-off valve (B).
6. Open bleed screw (D).
7. Operate priming pump (C) until fuel flows.
8. Close bleed screw (D).

OULXA64,0000BF5-19-20030521