



Record Transmission Serial Number

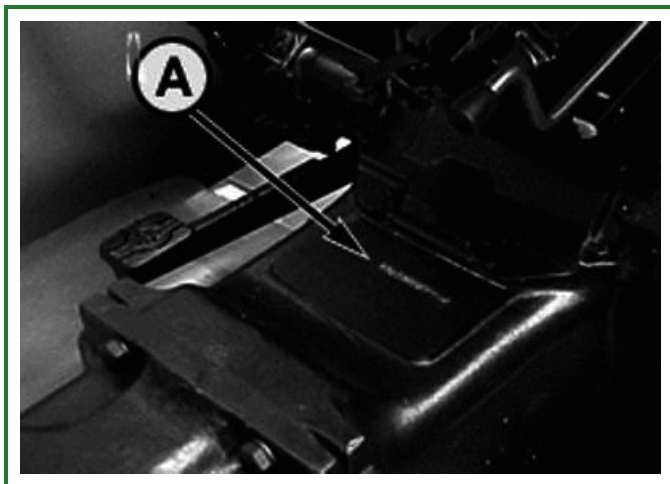

PY1537-UN: 5045E, 5055E, 5065E and 5075E Tractors

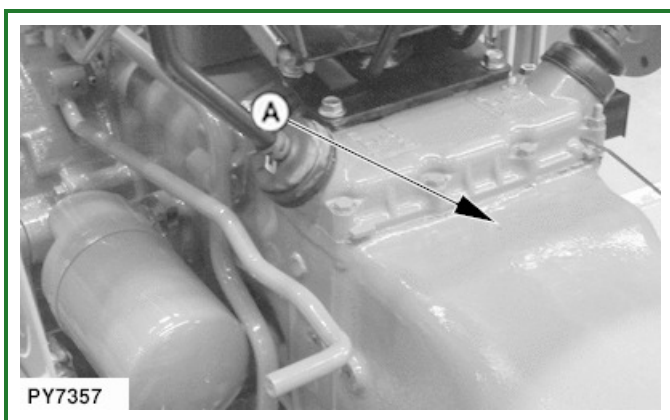

PY7357-UN: 5045D and 5055D Tractors


Transmission serial number is stamped into the lower left-hand corner of rear housing (A).

-: **Transmission Serial Number**

Transmission Serial Number

SA61034,0000614-19-20080924

Keep Proof of Ownership

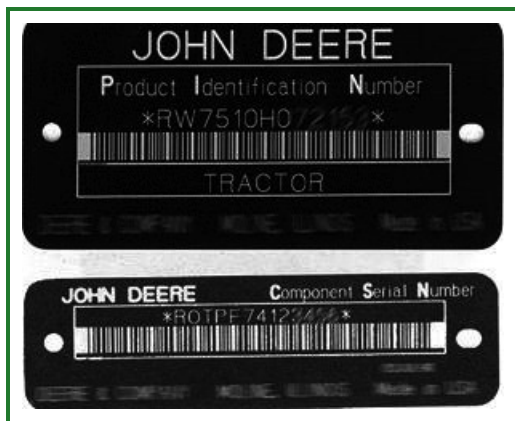

TS1680-UN: Product Identification Number

1. Maintain in a secure location an up-to-date inventory of all product and component serial numbers.
2. Regularly verify that identification plates have not been removed. Report any evidence of tampering to law enforcement agencies and order duplicate plates.
3. Other steps you can take:
 - Mark your machine with your own numbering system
 - Take color photographs from several angles of each machine

DX,SECURE1-19-20031118