


Replace Headlight Bulb


IMPORTANT:

Once replaced the headlight bulb, makes sure that hood is locked properly and keeps the hood lock key with operator only.


1.

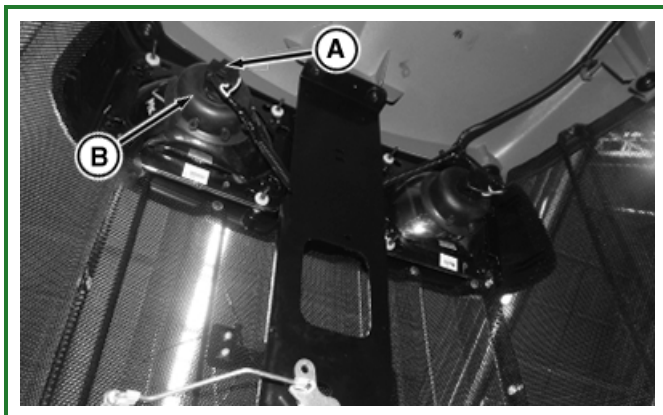

APY10173-UN: Hood - Upside Down

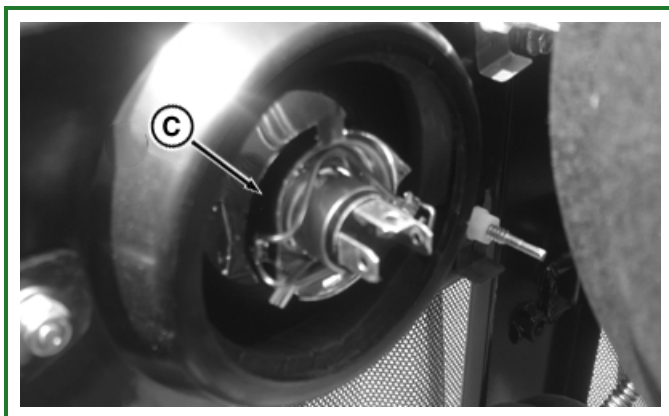

APY10174-UN: Collar

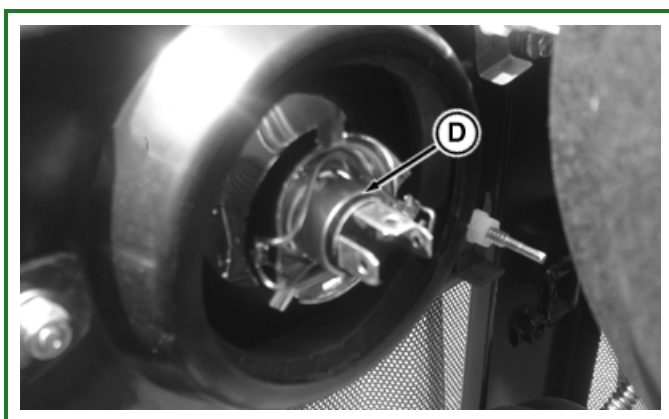

APY10175-UN: Bulb

LEGEND:

A - Headlight Connector

B - Dust Boot

C - Collar

D - Bulb

Remove headlight connector (A).

2. Remove dust boot (B).

-
3. Twist collar (C).
 4. Remove bulb (D).
 - 5.

 CAUTION:

A halogen bulb is pressurized and can shatter. Protect bulb against abrasions and scratches.

To guard against personal injury, wear protective eyeglasses and clothing when handling bulb. Turn power off when installing and before removing bulb. Dispose of the bulb with care.

Allow bulb to cool before removing.

Read and follow all bulb manufacturers installation instructions.

Install bulb, collar, seal, and connector in reverse order.

HK75640,0000323-19-20180806