



Check Transmission—Hydraulic System Oil Level

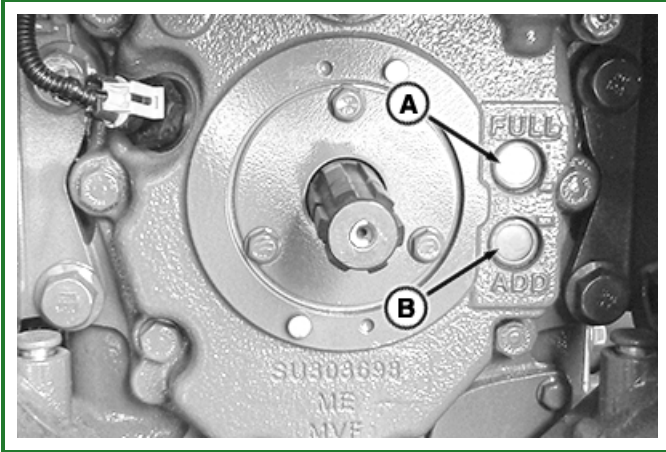

PY36943-UN: Check Transmission-Hydraulic System Oil Level

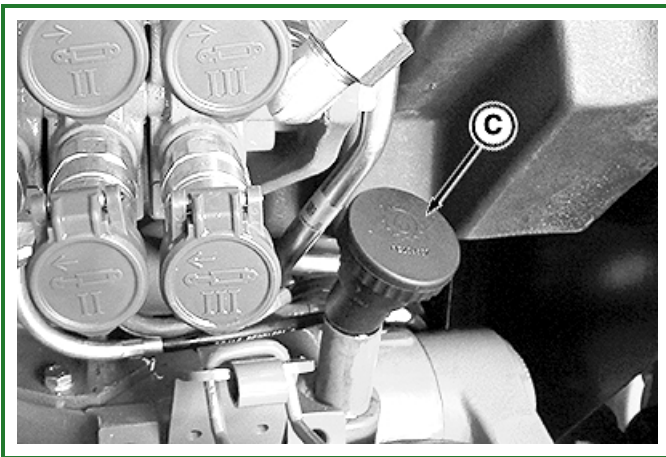

PY36944-UN: Sight Glass

LEGEND:

- A - Full Mark / Upper Sight Glass
- B - Add Mark / Lower Sight Glass
- C - Oil Filler Tube

-: Service Interval

Service Interval:

- Check— **Every 50 hours**
- Refill— **As required**

1. IMPORTANT:

Routine checks help prevent downtime. The operator can aid in preventive maintenance by documenting all leak and malfunction problems. Since the transmission operates in oil, it is important to keep oil clean and at the correct level at all times.

Operate engine at approximately 1000 rpm for at least 1 minute.

2. Move rockshaft lever full forward to lower hitch all the way down.
3. Stop engine and wait an additional 3 minutes before checking oil level.

-
- Oil level should be in the middle of the upper window.

NOTE:

As long as Add mark (B) in lower window is full, it is not necessary to add oil. Full mark (A) in upper window indicates that the oil level is full. No additional oil is required.

- If oil level is below Add mark (B), open oil filler tube (C) and pour in clean hydraulic oil until oil level reaches the Full mark (A). (See Transmission, Steering, Brake, Hydraulic, and Gear Case Oil in Fuels, Lubricants, and Coolants section).

AL61114,0000055-19-20171026