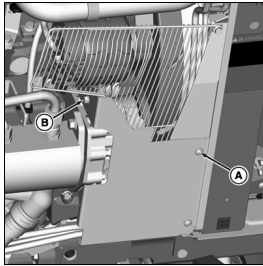

Replacing Fan Belt

Service Interval – As Required

1. Fan drive belt is equipped with an automatic tensioner which does not require adjustment.

DO NOT remove belt guard fastened to A/C compressor. Compressor is loose if cap screws are removed.

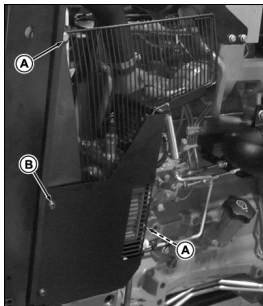


PULV008095-UN-22JUN10

Right-Side Guard

Remove hex socket head cap screw, washer, and flanged nut (A) from the right-hand side guard brace.

2. Remove two cap screws (B) retaining guard to radiator. Remove right-hand side guard.
- 3.



PULV008096-UN-16FEB10

Left-Side Guard

Remove hex socket head cap screw, washer, and flanged nut (B) from the left-hand side guard brace.

4. Remove two cap screws (A) retaining guard to radiator. Remove left-hand side guard.