

Replacing Bucket Teeth

CAUTION:

Guard against injury from flying pieces of metal; wear goggles or safety glasses.

IMPORTANT:

Angle the drift toward the bucket to avoid damaging the rubber pin lock.

1.



T95784-UN: Bucket Teeth

Use a hammer and drift to drive out locking pin.

2.

NOTE:

Alternate buckets may use different tooth assemblies.

Remove tooth.

3.



T95785-UN: Rubber Pin Lock


LEGEND:

A - Rubber Pin Lock

Inspect rubber pin lock (A) for damage. Replace if necessary.

4. If rubber pin lock has moved, reposition in slot in adapter tooth shank.

5.

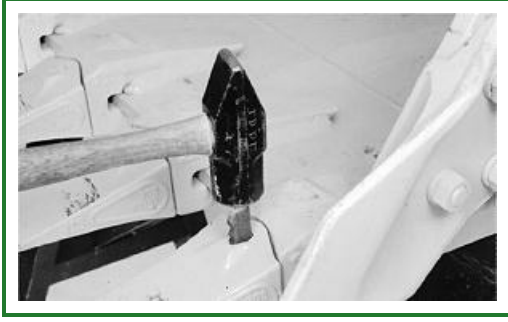

T95786-UN: Tooth Shank

Position the new tooth over the tooth shank.

6. Drive the locking pin into the hole fully.

NOTE:

Check bucket teeth periodically so that wear does not extend to the bucket tooth shank.

04T,90,M16-19-20110328