

TX1025654A-UN: JDLINK In-Line Fuse

LEGEND:

1 - JDLINK™ Unswitched Power In-Line Fuse (10 Amp)

1. Turn machine off.
2. Open battery compartment door on front left-side of machine to access the 10 Amp JDLINK™ unswitched power in-line fuse (1).

3. **NOTE:**

JDLINK™ unswitched power in-line fuse (F55) will be labeled with a tag and will be on the red wire.

To deactivate the JDLINK™ Machine Monitoring System, remove the unswitched power in-line fuse.


4. Close battery compartment door.

VD76477,00016E9-19-20100804

Using Battery Charger



TS204-UN: Prevent Battery Explosions

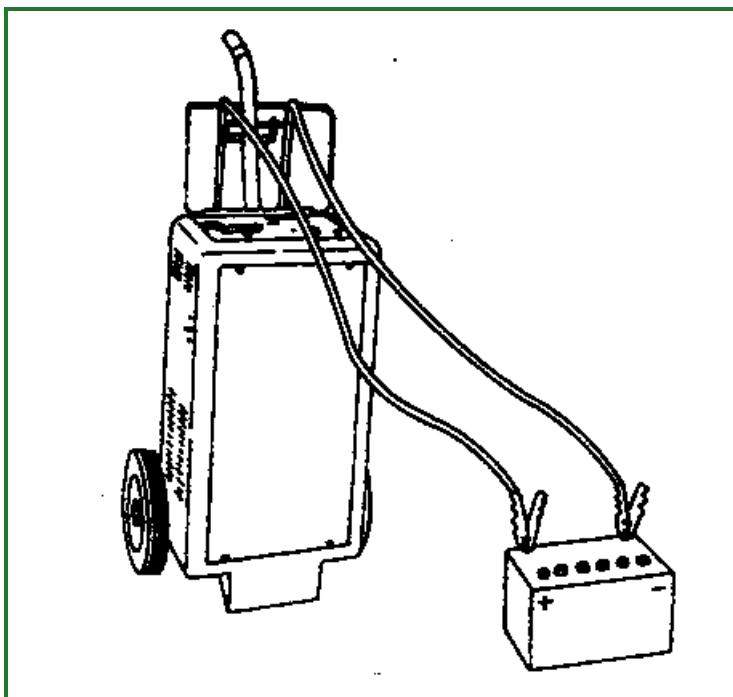

N36890-UN: Charger

⚠ CAUTION:

Prevent possible injury from exploding battery. Do not charge a battery if the battery is frozen or it may explode. Warm battery to 16°C (60°F) before charging.

Turn off charger before connecting or disconnecting it.

IMPORTANT:

Do not use battery charger as a booster if a battery has a 1.150 specific gravity reading or lower.

Disconnect battery ground (-) clamp before you charge batteries in the machine to prevent damage to electrical components.

A battery charger may be used as a booster to start engine.