


Change Winch Oil

1.

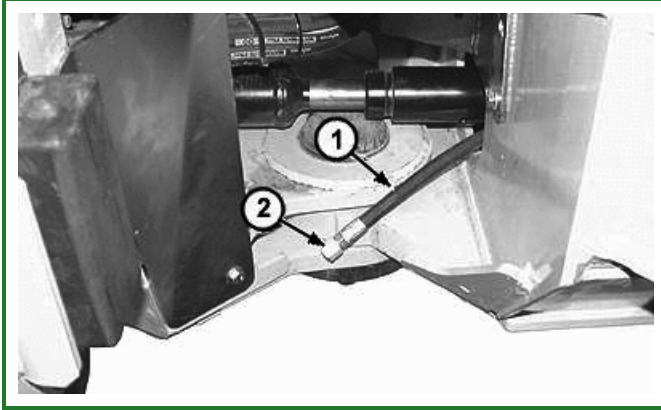

TX1019175A-UN: Left Side Shown

LEGEND:

1 - Winch Drain Hose

2 - Cap

Prepare machine for maintenance. See Prepare Machine for Maintenance. (Section 3-2.)

2.


NOTE:

Remove guards from rear frame near pivot if necessary to reach the winch drain hose (1). Hose is mounted to lower left corner of front of winch.

Route winch drain hose (1) outside of frame.

3. Remove cap (2) and drain oil into a container. Dispose of waste oil properly.

4.

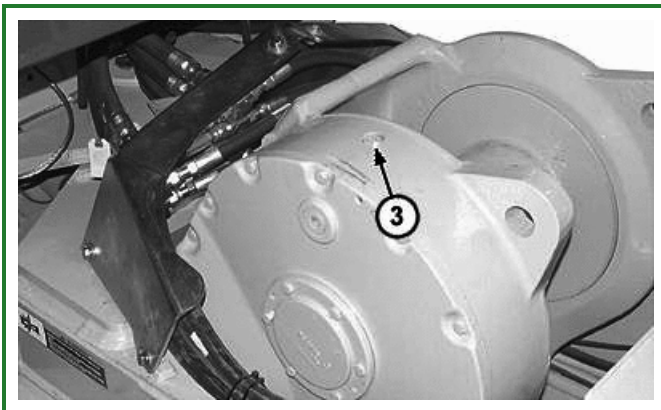

TX1019176A-UN: 4000 Winch

LEGEND:

3 - Fill Plug

Remove fill plug to speed draining of oil.

5. Install cap (2).

6. Add oil through fill plug hole. Oil level should be to bottom of oil fill plug hole. For winch oil specification, see Transmission, Park Brake, Differential, Cab Tilt Hydraulic Pump and Winch Oil. (Section 3-1.)

Item	Measurement	Specification
Winch Oil—4000 Series	Capacity	35.2 L 9.3 gal

7. Install fill plug.
8. Check oil level. Add oil if necessary.

MD04263,000023D-19-20090223