


Replacing Glow Plug Fuse

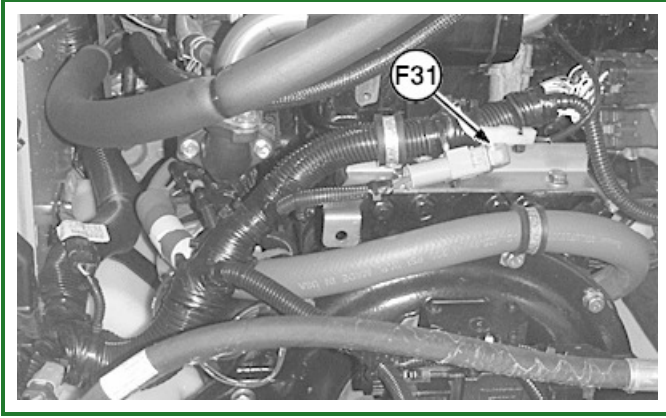

TX1128723-UN: Glow Plug Fuse

LEGEND:

F31 - Glow Plug 80 A Fuse

1. Park machine on level surface.
2. Raise and lock operator's station. See Raising Operator's Station. (Section 3-2.)

3.

NOTE:

Glow plug 80 A fuse (F31) is located above flywheel housing.

Pull fuse out of socket.

4. Check metal clip in fuse window. Discard fuse if clip is broken.
5. Ensure that the new fuse is the same amperage as the removed fuse. Push new fuse into socket.
6. Lower operator's station.

CN93077,0000058-19-20180201

Hardware Torque Specifications

Check cap screws and nuts to be sure they are tight. If hardware is loose, tighten to torque shown on the following charts unless a special torque is specified.

TX,90,FF1225-19-20080116