


Replacing Drive and Marker Light Bulbs



T214510A-UN: Drive Light

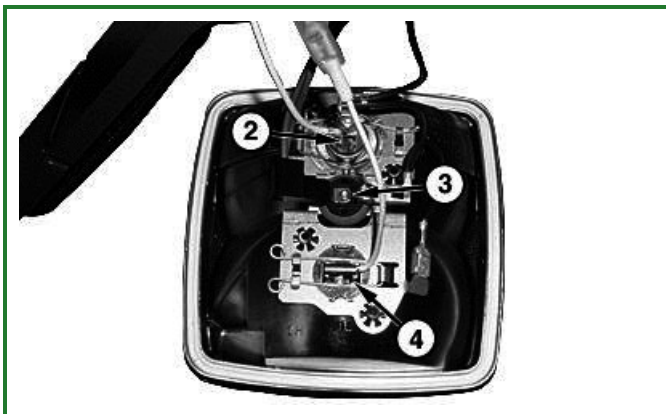

T214512A-UN: Bulb Replacement

LEGEND:

- 1 - Screw (4 used)
- 2 - Low Beam Bulb
- 3 - Marker Light Bulb
- 4 - High Beam Bulb

1. Remove screws (1) and drive light assembly.

2.

NOTE:

Wire locations should be noted prior to removal.

To disconnect wires from bulb terminals, push tab up, then pull the connector from terminal.

3. Release retainer clips to remove bulbs from drive light assembly.

4. **IMPORTANT:**

Do not touch the halogen bulb with bare hands. Oil and moisture may cause premature bulb damage. Clean bulb using a soft, oil-free cloth and alcohol.

Replace bulbs as necessary.

5. Install retainer clip into locking tabs.

6. Connect wiring leads. Check wiring leads for proper clearance of bulb retaining clips.

7. Install light assembly in housing making sure wires are not crimped.

8. Install screws and tighten alternately. Do not overtighten.

Replace Directional Bulbs



T214511A-UN: Directional Lamp



T214513A-UN: Directional Lamp Bulb

LEGEND:

1 - Screw (2 used)

2 - Directional Lamp Bulb

1. Remove screws (1), lens cover, and gasket.
2. Replace directional lamp bulb (2).
3. Install gasket, lens cover, and screws. Do not overtighten.