

**TX1074226A-UN: Blower Fan and Temperature Controls**

**LEGEND:**

- 1 - Blower Fan Speed Knob
- 2 - Temperature Control Knob

Check operation of following:

- Front and rear windshield wiper and washer.
- Air conditioner and heater blower fan.
- Precleaner blower fan.

*LOOK: Do windshield wipers and washers operate correctly?*

*LISTEN/FEEL: Does air conditioner and heater blower fan incrementally increase in speed when blower speed switch is moved to all four speed positions?*

*LISTEN/FEEL: Does precleaner blower operate when blower speed switch is moved to all four speed positions?*

**Record of Actual Results:**

**Result:**

**YES:**

Go to next check.

**NO:**


If both blower fans do not operate, check fuse (F5). See Replacing fuses. (Section 4-1.)

**IF OK:**

See your authorized John Deere dealer.

**4 Transmission Gear Shift Switch Check—Steering Column Mount Only**

**Action:**

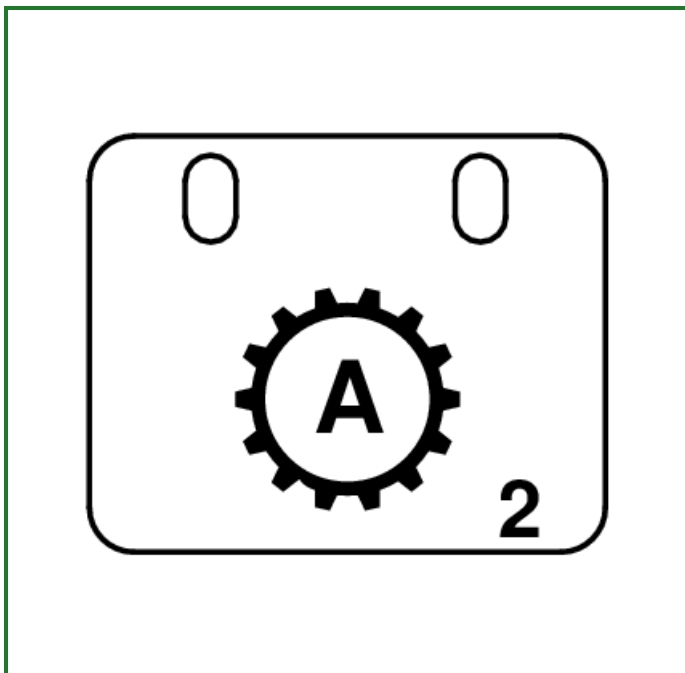

**TX1028750-UN: Automatic Transmission Switch**

Press automatic transmission switch to OFF position (LEDs off).

Move steering column FNR/gear select switch to forward (F), neutral (N), and reverse (R) positions.

*LOOK: Does steering column FNR/gear select switch move into forward, neutral, and reverse positions?*

*LOOK: Does steering column FNR/gear select switch stay in detented positions?*

*LISTEN: Does backup alarm activate when steering column FNR/gear select switch is in reverse position?*

Rotate steering column FNR/gear select switch handle to select each gear:

- Four-Speed Transmission—1, 2, 3, and D
- Five-Speed Transmission—1, 2, 3, 4, and D

*LOOK: Does gear number align with pointer in each detented position?*

*LOOK/FEEL: Does handle remain in detented positions?*

*LOOK: Does ADU display indicate neutral position (N), and is correct gear highlighted?*

**Record of Actual Results:**

**Result:**

**YES:**

Go to next check.

**NO:**

If lever does not move or rotate correctly, replace lever.

**NO:**

If backup alarm does not operate, check fuse (F32). If gear selection does not change on ADU display, check fuse (F28). See Replacing Fuses. (Section 4-1.)

**IF OK:**

See your authorized John Deere dealer.