


Front Door Latch


Removal and Installation

NOTE: The door glass must be completely raised.

1. Remove the front door trim panel. For additional information, refer to [Section 501-05](#).
2. For the driver door, remove the door lock cylinder. For additional information, refer to [Door Lock Cylinder](#) in this section.
3. For the passenger door, remove the exterior door handle. For additional information, refer to [Exterior Door Handle](#) in this section.
4. Position the water shield aside.
5. Disconnect the front door latch actuator electrical connector.
6. Remove the door lock rod extension from the door lock rod.
7. Push the door lock rod and grommet through the door panel.
8. Push the interior door handle cable and grommet through the door panel, and pull them back out through the door panel access hole.
9. Remove the door latch carrier screw.

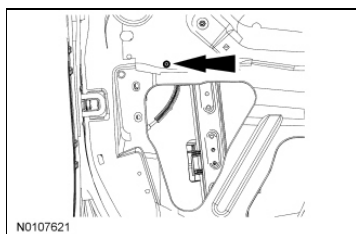

10. Remove the 2 window glass rear track nuts.
 - To install, tighten to 11 Nm (97 lb-in).

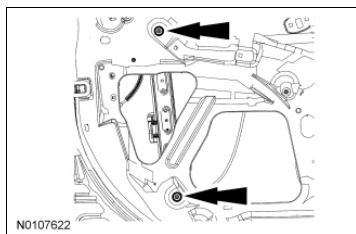


11. **NOTICE:** To prevent the front door glass from breaking, do not use excessive force when pushing on the window glass track.


Push the lower window glass track stud through the door panel towards the front of the vehicle.

12. Loosen the exterior door handle reinforcement bolt.


- To install, tighten to 7 Nm (62 lb-in).

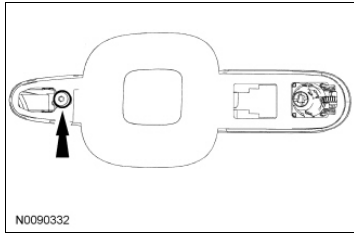

13. Slide the exterior front door handle reinforcement to the front of the vehicle and push it inside the door.
 14. For the driver door, disconnect the keyless entry keypad electrical connector and unclip the harness from the door.
 15. Remove the 3 front door latch bolts.
 - To install, tighten to 8 Nm (71 lb-in).
 16. Remove the complete latch, carrier, and handle reinforcement assembly from the door.
 17. For the driver door, detach the lock cylinder rod from the lock cylinder lever.
 18. Open the clip and disconnect the exterior front door handle actuating rod.
 19. Unclip and remove the front door latch from the carrier.
 20. To install, reverse the removal procedure.
-

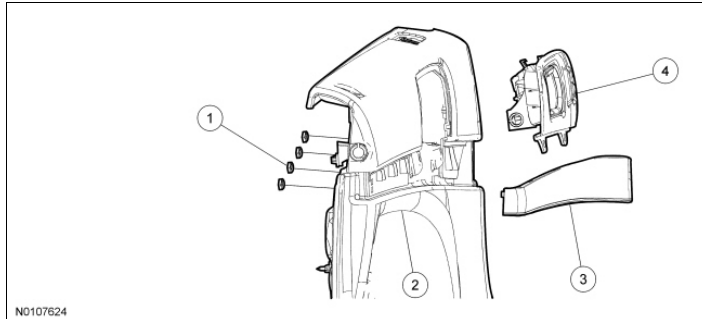Interior Door Handle**Front Interior Door Handle**

Item	Part Number	Description
1	-	Door trim panel moulding nuts (4 required)
2	7423943/ 7423942	Door trim panel (LH/RH)
3	7420943/ 7420942	Door trim panel moulding (LH/RH)
4	7422601/ 7422600	Interior door handle (LH/RH)

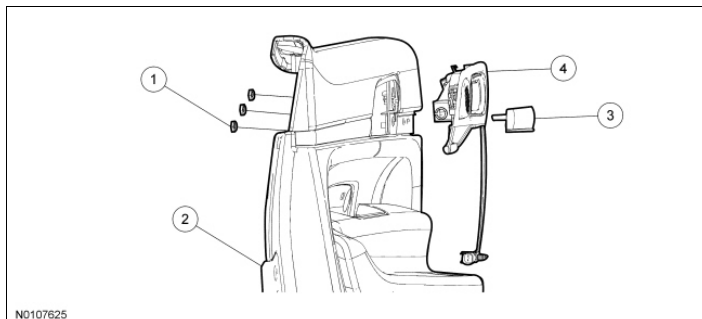
Rear Interior Door Handle

Item	Part Number	Description
1	-	Door trim panel moulding nuts (3 required)
2	7427407/ 7427406	Door trim panel (LH/RH)
3	7420943/ 7420942	Rear door trim panel moulding (LH/RH)
4	7422601/ 7422600	Interior door handle (LH/RH)

Removal and Installation

1. Remove the door trim panel. For additional information, refer to [Section 501-05](#) .
2. Remove the 4 (front door) or 3 (rear door) door trim panel moulding nuts.
3. Release the door trim panel moulding clips and remove the moulding.
4. Unclip the ambient light LED from the handle.

5. If equipped, unclip the tweeter speaker wiring from the door panel.
 6. Remove the interior door handle from the trim panel.
 7. To install, reverse the removal procedure.
-

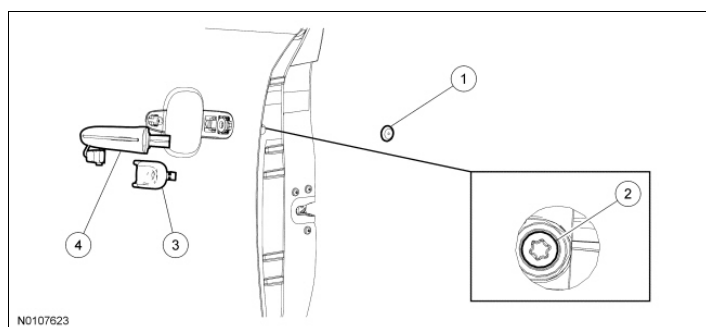Exterior Door Handle

Item	Part Number	Description
1	W714032	Plug
2	-	Exterior door handle bezel retaining screw
3	54218A14/ 5422088	Exterior door handle bezel (with key hole/without key hole)
4	5422404	Exterior door handle

Removal and Installation

⚠ WARNING: Disconnect the window regulator motor connector before working inside the vehicle doors. Service actions inside the door (such as door latch, handle or lock cylinder service) or operating the remote keyless entry (RKE) fob may activate the windows on vehicles equipped with global open/close. Serious injury to hands or arms may occur if a window motor is activated during service. Failure to follow these instructions may result in serious personal injury.


Driver door

1. Remove the door trim panel. For additional information, refer to [Section 501-05](#) .
2. Position the water shield aside.
3. Disconnect the window regulator motor electrical connector.
4. Disconnect the exterior driver door handle electrical connector.

All doors

5. Remove the plug from the rear of the door.
6. Loosen, but do not remove the exterior door handle bezel retaining screw and remove the exterior door handle bezel.
7. **NOTE:** Slide the exterior door handle rearward to release.

Remove the exterior door handle.

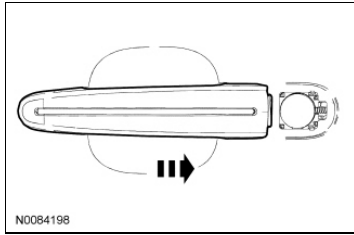

8. To install, reverse the removal procedure.
