


LEFT CONSOLE (CONT'D)


Joystick Console Frame Disassembly And Assembly (Cont'd)

Figure 50-60-38

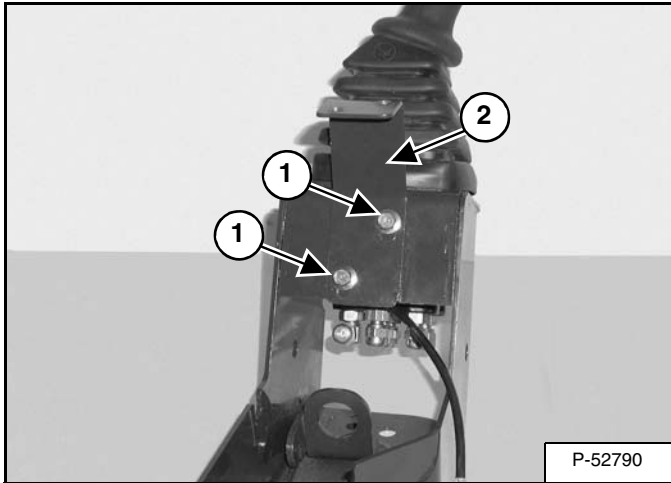

Remove the bolts (Item 1). Remove the bracket (Item 2) [Figure 50-60-38].


Figure 50-60-39

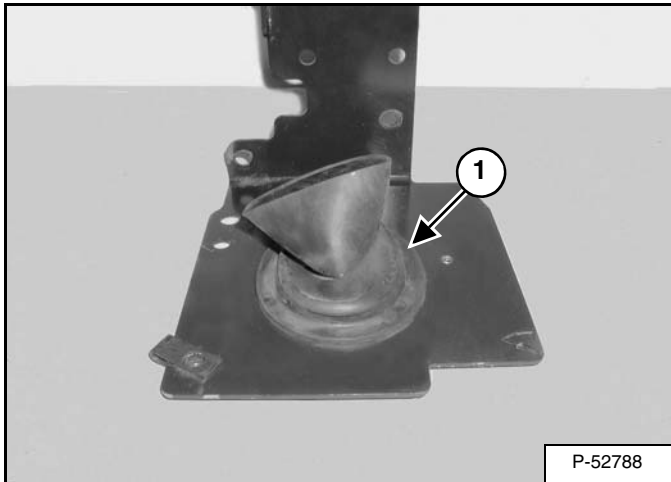

Remove the dust boot (Item 1) [Figure 50-60-39].


Left Rear Console Cover Removal And Installation

Figure 50-60-40

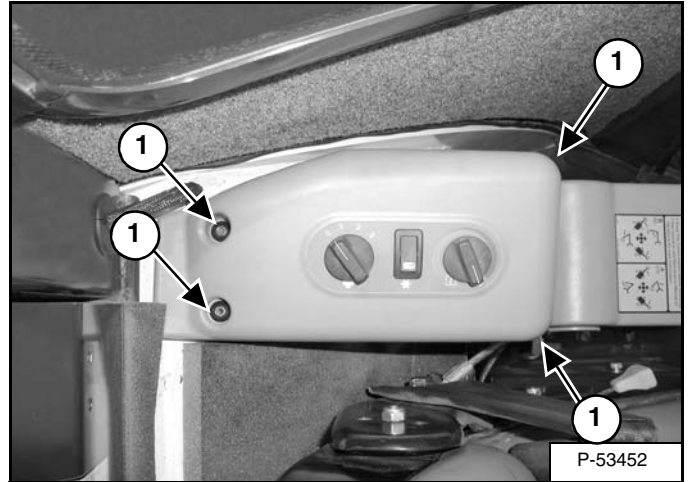

Remove the four console cover screws (Item 1) [Figure 50-60-40].

Figure 50-60-41

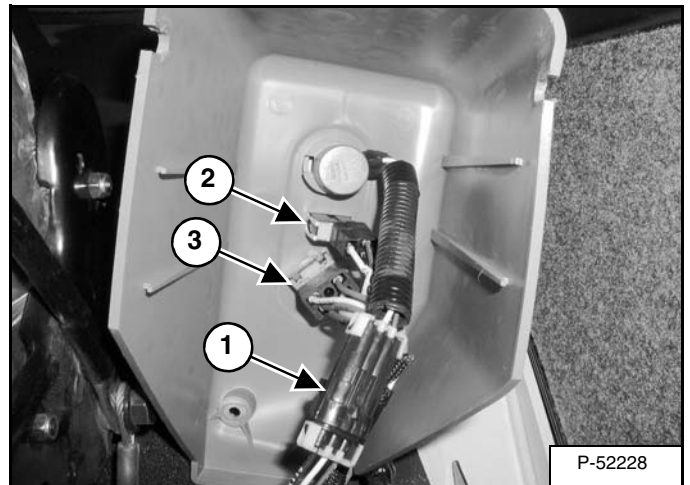

Lift the console cover and disconnect the harness (Item 1) [Figure 50-60-41] from the potentiometer harness. (If equipped with Heater/AC.)

Disconnect the harness (Item 2) [Figure 50-60-41] from the A/C switch. (If equipped with Heater/AC.)

Disconnect the harness (Item 3) [Figure 50-60-41] from the blower switch. (If equipped with Heater/AC.)

Remove the console from the excavator.

LEFT CONSOLE (CONT'D)


Left Rear Console Frame Removal And Installation

Remove the upper console cover. (See Joystick Console Cover (Top) Removal And Installation on Page 50-60-1.)

Remove the lower console cover. (See Joystick Console Cover (Bottom) Removal And Installation on Page 50-60-1.)


Remove the rear console cover. (See Left Rear Console Cover Removal And Installation on Page 50-60-13.)

Figure 50-60-42

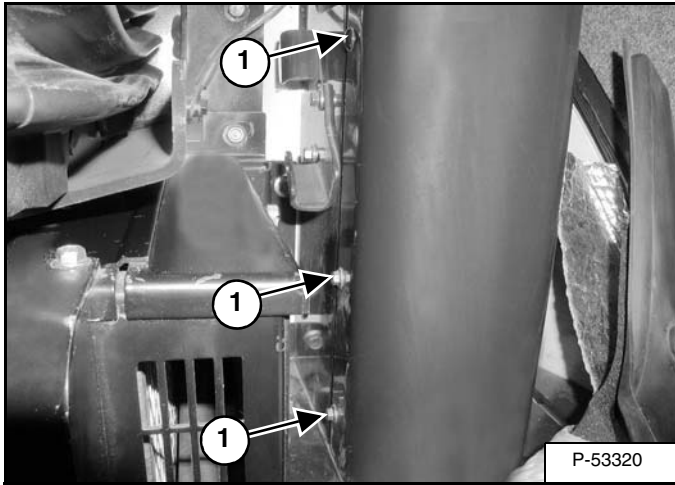

Remove the bolts (Item 1) [Figure 50-60-42] from the console base cover.


Figure 50-60-43

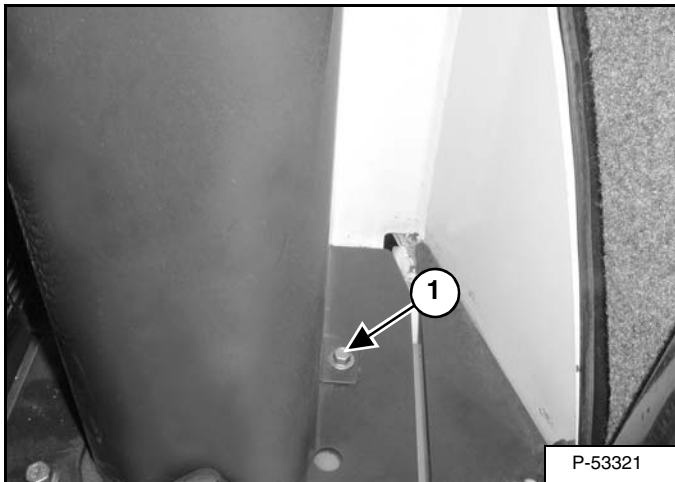

Remove the bolt (Item 1) [Figure 50-60-43] from the console base cover.


Remove the console base cover.

Figure 50-60-44

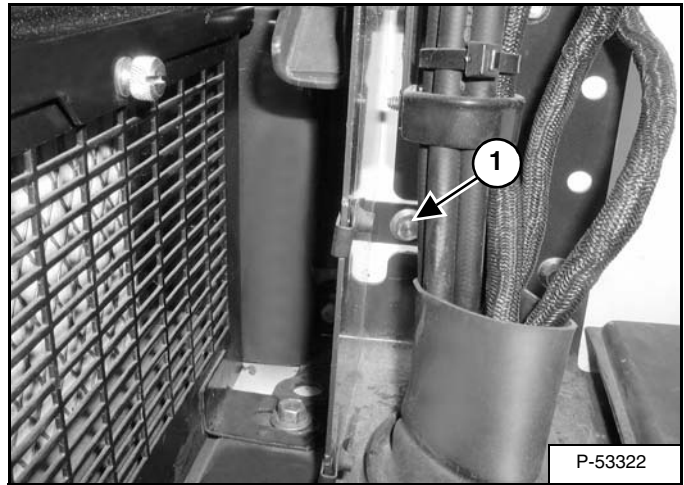

Remove the bolt (Item 1) [Figure 50-60-44] from the mount bracket.

Figure 50-60-45

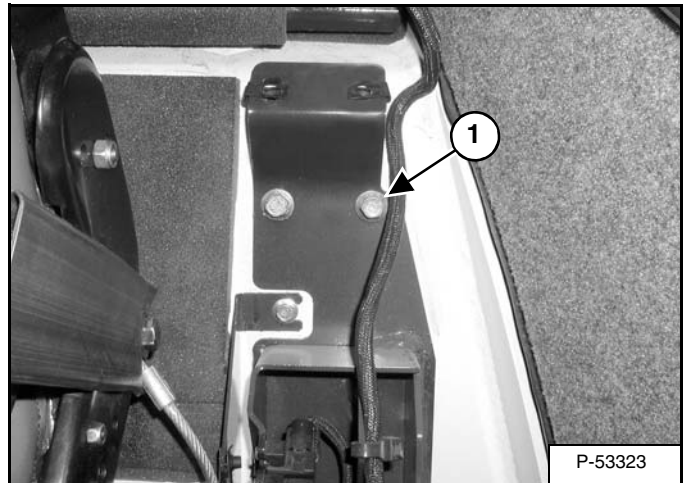

Remove the bolt (Item 1) from the mount bracket (Item 2) [Figure 50-60-45].

Remove the console base mount bracket.