

# Removal And Installation (Cont'd)

Figure 50-10-9

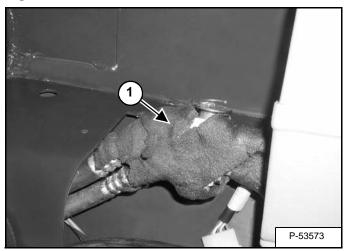

Temporarily remove the protective covering (Item 1) **[Figure 50-10-9]** from the A/C hoses and expansion valve.


Figure 50-10-10

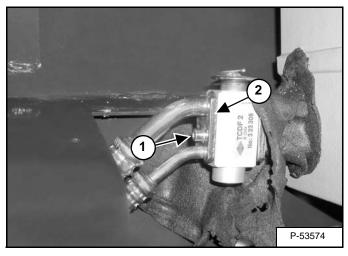

Remove the bolt (Item 1) and plate (Item 2) [Figure 50-10-10]. Remove the A/C hoses.


NOTE: Plug the A/C hoses to prevent contamination.

Figure 50-10-11

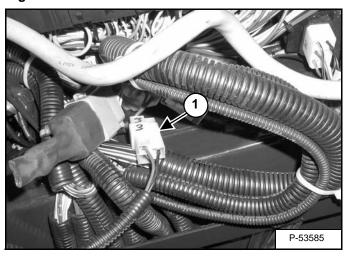

Unplug the connector (Item 1) [Figure 50-10-11] located under the fuse box.


Figure 50-10-12

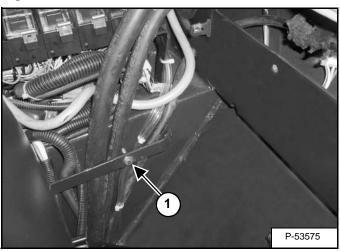

Loosen the mounting bracket bolt (Item 1) [Figure 50-10-12].


#### Removal And Installation (Cont'd)

Figure 50-10-13

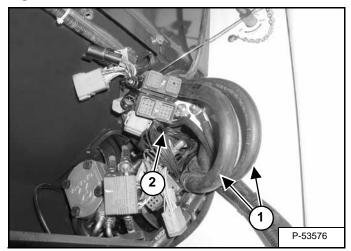

Remove the two A/C hoses (Item 1) and harness (Item 2) [Figure 50-10-13] completely from the rear corner of the cab.

Figure 50-10-14

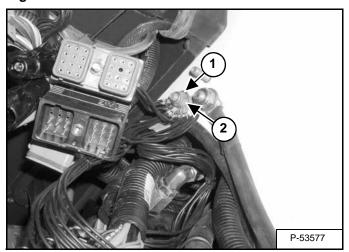

Remove the nut and washer (Item 1) and remove the ground wires (Item 2) [Figure 50-10-14].

# **WARNING**

Hydraulic fluid escaping under pressure can have sufficient force to enter a person's body by penetrating the skin. This can cause serious injury and possible death if proper medical treatment by a physician familiar with this injury is not received immediately.


W-2145-0290

# **IMPORTANT**

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 50-10-15

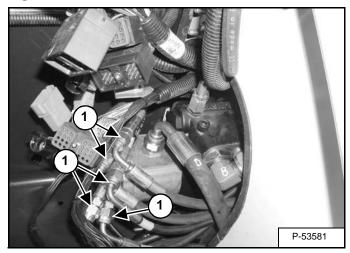

Remove the five hoses (Item 1) [Figure 50-10-15].


Figure 50-10-16

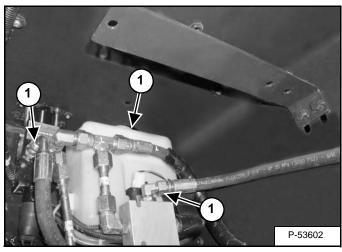

Remove the three hoses (Item 1) **[Figure 50-10-16]** from the brake valve. Remove any necessary tie straps.

### Removal And Installation (Cont'd)


Figure 50-10-17

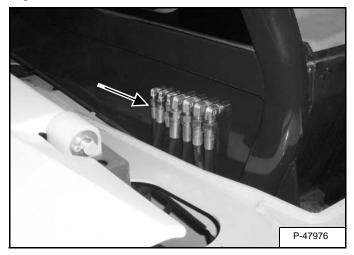

Remove the seven hoses [Figure 50-10-17].


Open the engine cover.

Figure 50-10-18

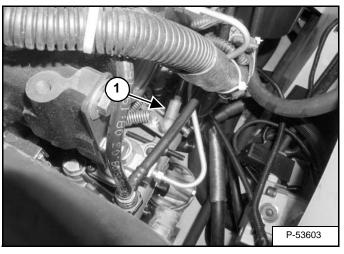

Remove the engine speed control cable (Item 1) [Figure 50-10-18].

Figure 50-10-19

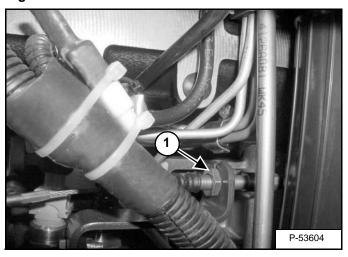

Remove the engine speed control cable (Item 1) [Figure 50-10-19] from the bracket.


Figure 50-10-20



Install a hoist to lift and support the operator cab [Figure 50-10-20].


#### Removal And Installation (Cont'd)

Figure 50-10-21

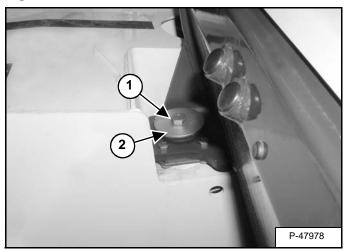


Remove the operator cab mount bolt (Item 1) and washer (Item 2) **[Figure 50-10-21]** from the front of the cab.

Figure 50-10-22

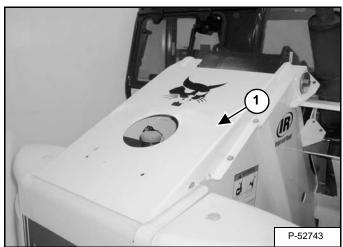


Remove the rear cover (Item 1) [Figure 50-10-22] from the machine.

Figure 50-10-23

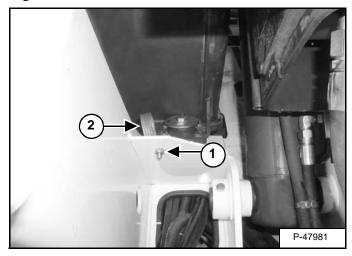

Remove the nut (Item 1) and bolt. Remove the grounding strap (Item 2) [Figure 50-10-23].

Figure 50-10-24

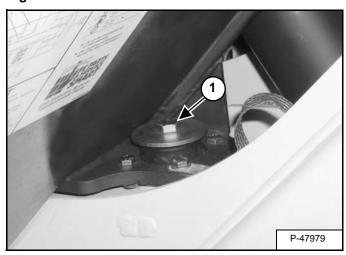

Loosen the rear mounting bolt (Item 1) [Figure 50-10-24], remove the nut.

NOTE: The bolt cannot be removed from the mount.

### Removal And Installation (Cont'd)

Figure 50-10-25


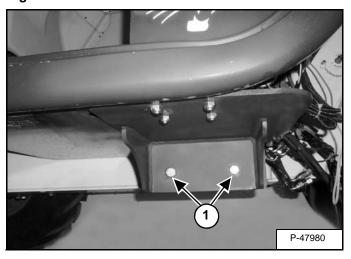


Figure 50-10-26



Remove the bolts (Item 10 [Figure 50-10-25] nuts (Item 1) and rubber cushions (Item 2) [Figure 50-10-26].

Figure 50-10-27

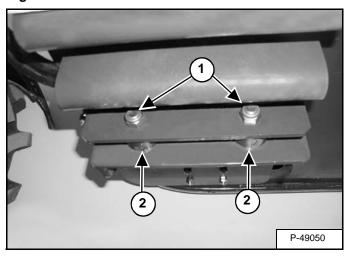

Lift and remove the operator cab [Figure 50-10-27].