


AXLE AND DIFFERENTIAL (FRONT) (CONT'D)

Wheel Hub Inspection

Figure 40-20-23

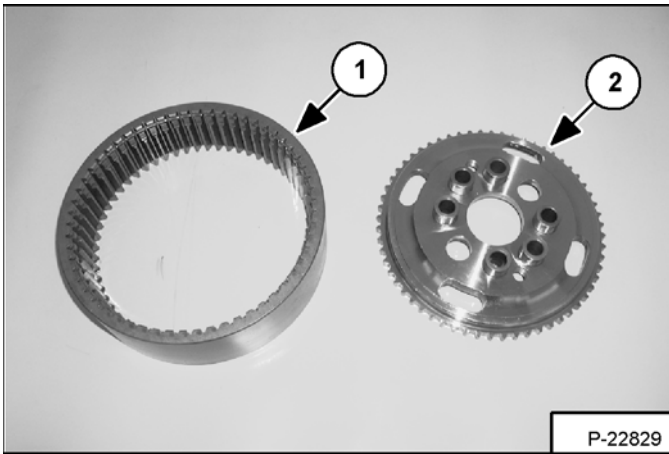

Inspect the ring gear (Item 1) and inner gear (Item 2) [Figure 40-20-23] for broken or damaged teeth.

If the ring gear or inner gear are damaged, replace both parts.

Steering Knuckle Parts Identification

