



Assembling and disassembling the rear PTO

10. Push back the clutch cover (3) using 2 disc screws M10.

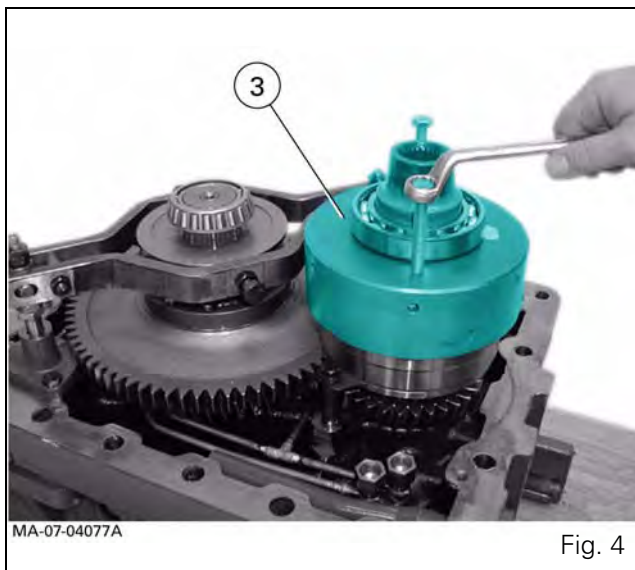

11. Remove the nozzle (29).

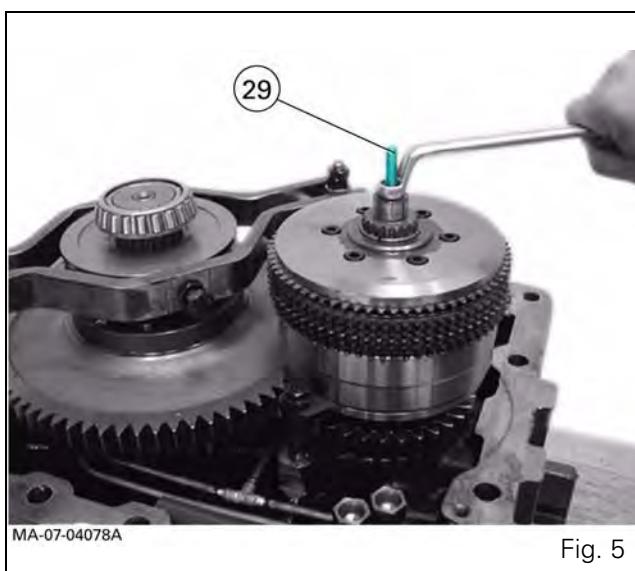

12. Fit the compression tool (ref. X899.980.145) and compress the clutch.
13. Extract the locking half-rings (30).
14. Release the clutch.
15. Remove the disc carrier and the set of discs (10).

