

Illustration 1

g00638158

1. Use Tooling (A) in order to remove the bearing from the rod end of cylinder (1) .

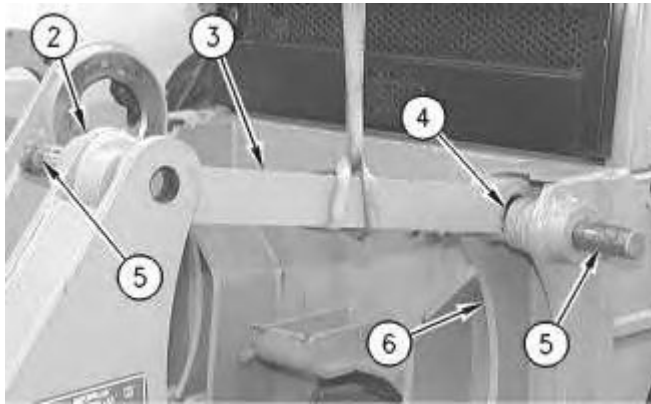


Illustration 2

g00638159

2. Position a suitable lifting sling around link assembly (3). Secure the lifting sling to a hoist.
 3. Remove the bolts and the locknuts from pin (5) .
 4. Remove pin (5) and spacers (4) from link assembly (3), carriage assembly (2), and mounting bracket (6) .
 5. Remove carriage assembly (2) from the ripper assembly. The weight of link assembly (3) is 20 kg (45 lb).
 6. Repeat Steps 2 through 5 in order to remove the remaining link assembly.
-