



Illustration 14

g00939592

21. Start the engine and run the engine. Move drawbar (1) to the original position. Remove the blocking from underneath blade (2) and remove Tooling (A) under circle (3) .

22. Stop the engine.

