

2. Remove plug (2). Remove O-ring (3) from the plug.

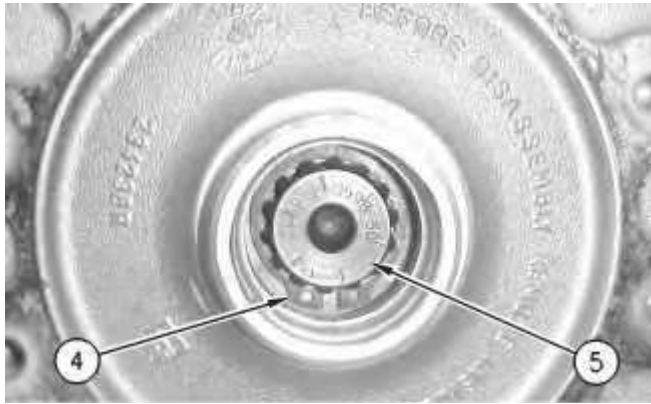


Illustration 4

g00747541

3. Use Tool (B) in order to remove retaining ring (4) from the shaft (5).

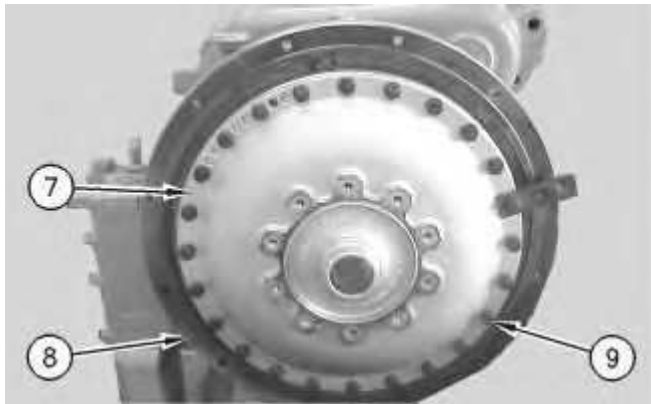


Illustration 5

g00747545

4. Remove bolts (9) that secure turbine cover assembly (7) to the impeller assembly (not shown).

5. Remove turbine cover assembly (7) from the torque converter housing (8).

Removal of the Impeller Assembly

Table 2

Tools Needed			
Tool	Part Number	Name	QTY
A	1P-1859	Retaining Ring Pliers	1