



Illustration 2

g01091022

2. Disconnect harness assembly (3) .



Illustration 3

g01091023

3. Disconnect water hoses (6) from diaphragm pump (4) .
4. Remove bolts (5) and remove diaphragm pump (4) from the machine.

Installation Procedure
