


Tools Needed		A	B	C	D	E
1P1864	Retaining Ring Pliers	1				
5P9736	Link Bracket		2			
1P820	Hydraulic Puller Group			1		
6V9061	Manual Pump Group (or electric)			1		
1B4207	Nuts			2		
3H465	Plate			4		
8B7549	Leg			2		
5F7342	Adapter			2		
5F7343	Bearing Pulling Attachment			1		
1P520	Driver Group			1		1
FT553	Adapter				1	

Start By:

- a. remove torque converter

NOTICE

When a torque converter or divider has a failure, the complete oil system for the torque converter, torque divider and transmission must be thoroughly cleaned. Any foreign material which is not removed from the oil system for the torque converter will move through the hydraulic system for the transmission.

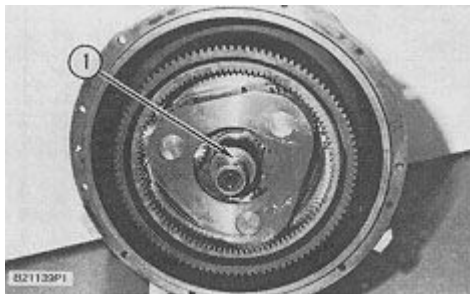

1. Use tool (A) to remove snap ring (1) from the shaft