

Illustration 5

g00800411

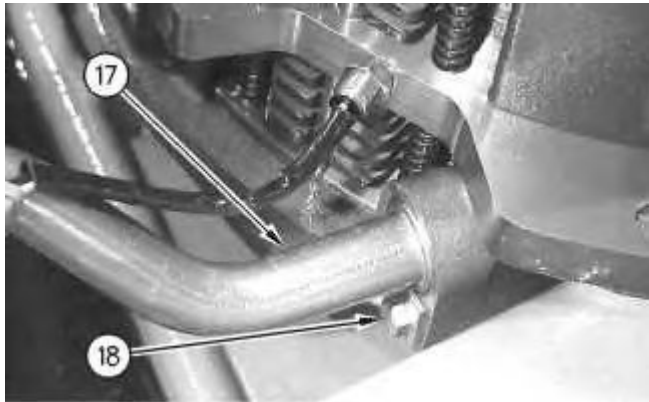


Illustration 6

g00800412

8. Remove plug (16) and the O-ring seal. Remove bolt (18) and the retainer. Remove tube (17) and the O-ring seal from the housing assembly.