



Illustration 68

g03863773

84. Position transmission hydraulic control valves (1C).
85. Install bolts (1B). Tighten bolts (1B) to a torque of  $30 \pm 4$  N·m ( $22 \pm 3$  lb ft).
86. Connect harness assemblies (1A).
87. Install tubes (1) and (2). Tighten tubes (1) and (2) to a torque of  $35 \pm 7.5$  N·m ( $26 \pm 6$  lb ft)

**End By:**

- a. Connect the transmission and bevel gear.
-