

		0 to 3,445 kPa (0 to 500 psi)	
B3	198-4236	Adapter Cable As	1

Machine Preparation

1. Move the machine to a smooth horizontal location.
2. Place the steering control lever in the NEUTRAL position.
3. Engage the parking brake.
4. Lower the attachments to the ground.
5. Stop the engine.
6. Turn the key to the ON position, but do not start the engine.

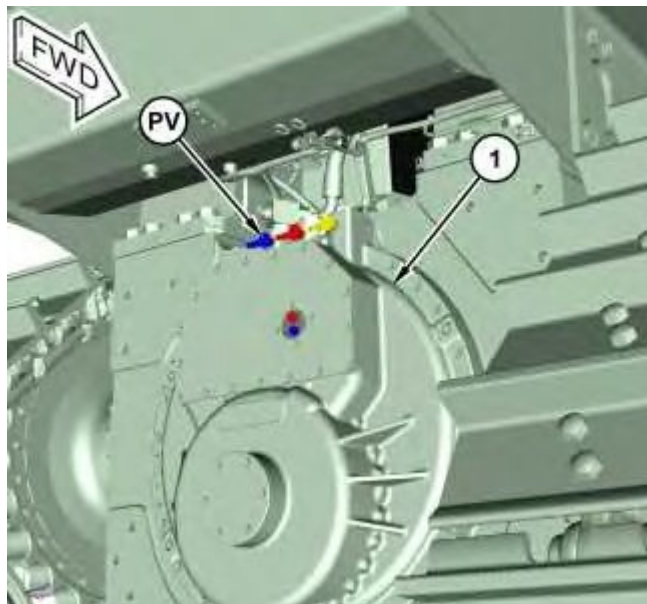


Illustration 3

g02790509

The pressure tap for the priority valve is located on the top of the back cover of the transmission at the rear of the machine.

(PV) Pressure tap for the transmission main relief valve

(1) Transmission

7. Connect tooling (A) or (B) to pressure tap (PV) on transmission (1) .

Priority Valve (Test)

1. Start the engine.