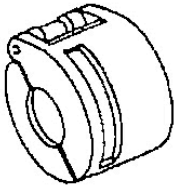
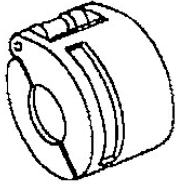
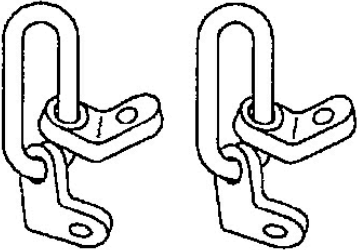


2002 Ford Escort

2002 ENGINE Engine - 2.0L Zetec - Escort & ZX2

ENGINE-AUTOMATIC TRANSAXLE

	<p>Disconnect Tool, Spring Lock Coupling (1/2“) 310-D005 (D87L-9280-B) or equivalent</p>
	<p>Disconnect Tool, Spring Lock Coupling (3/8”) 310-D004 (D87L-9280-A) or equivalent</p>
	<p>Brackets, Engine Lifting 303-050 (T70P-6000)</p>

G02207195

Fig. 141: Identifying Special Tools


1. Remove the hood.

2002 Ford Escort

2002 ENGINE Engine - 2.0L Zetec - Escort & ZX2

WARNING: Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable mixtures are always present and may be ignited, resulting in possible personal injury.

2. Relieve the fuel system pressure. For additional information, refer to **FUEL SYSTEM PRESSURE RELEASE** .
3. Remove the battery (10653).
4. Remove the battery tray (10732).
5. Disconnect the heated oxygen sensor (HO2S) (9F472). For additional information, refer to **HEATED OXYGEN SENSOR** .
6. Drain the engine coolant. For additional information, refer to **ENGINE COOLING** .
7. Recover the A/C refrigerant. For additional information, refer to **RECOVERY/EVACUATION & RECHARGING** .
8. Remove the catalytic converter.
9. Remove the radiator splash shield. .
10. Disconnect the starter motor wiring. For additional information, refer to **REMOVAL & INSTALLATION** .
11. Remove the drive belt (8620). For additional information, refer to **SPECIFICATIONS & DRIVE BELT ROUTING** .
12. Remove the A/C compressor (19703). For additional information, refer to **COMPRESSOR** .
13. Disconnect the lower radiator hose and heater hose.

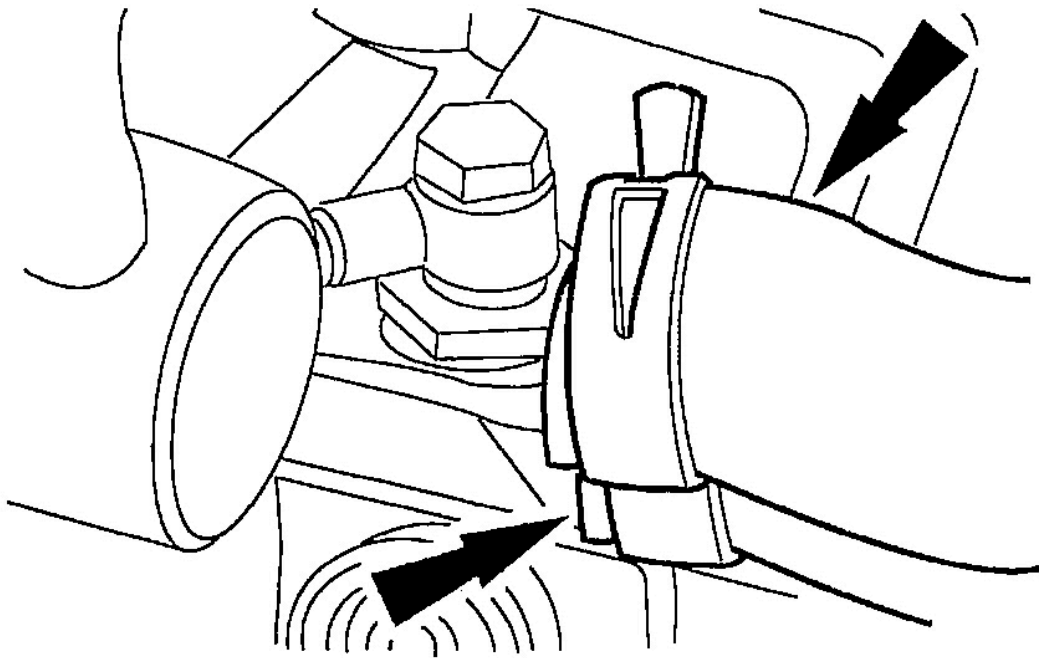

G02207196

Fig. 142: Disconnecting Lower Radiator Hose And Heater Hose (Automatic Transmission)

14. Disconnect the power steering pressure line. For additional information, refer to POWER STEERING .
15. Remove the torque converter inspection cover.