



17.12b . . . and withdraw the mirror control panel

then lift the trim panel to disengage it from the top retaining clips, and withdraw the panel from the door (see illustrations).

16 Refitting is a reversal of removal.

Rear door

Models up to 1987

- 17 Proceed as shown in paragraphs 1 to 3.
- 18 On models fitted with electric windows, disconnect the battery negative lead, then prise the switch from the armrest and disconnect the wiring plug.
- 19 Proceed as described in paragraph 6.
- 20 Refitting is a reversal of removal, but ensure that all the retaining clips are correctly aligned before pressing them into the door.

Models from 1987

- 21 Proceed as described in paragraph 1.
- 22 Remove the securing screw from the interior door handle, then pull out the ashtray, and remove the two now exposed screws.



18.3a Remove the securing screws . . .



18.3b . . . and slide the handle assembly from the door aperture



17.15a Trim panel securing screw at bottom rear edge of door

23 Lift the interior door handle, and withdraw the handle/ashtray surround.

24 Prise out the armrest trim panel, remove the three securing screws and withdraw the armrest.

25 Remove the two trim panel securing screws from each side of the door, then lift the trim panel to disengage it from the top retaining clips, and withdraw the panel from the door.

26 Refitting is a reversal of removal.


18 Door interior handle - removal and refitting

Removal

- 1 Remove the door inner trim panel.
- 2 Where necessary for improved access, peel back the waterproof plastic sheet from the door.
- 3 Remove the two securing screws in the case of models up to 1987, or the single securing screw on models from 1987, and slide the handle assembly from the door aperture, if necessary unclipping the remote control rods from their guides (see illustrations).
- 4 Disconnect the remote control rods from the handle assembly, and withdraw the handle assembly.

Refitting

5 Refitting is a reversal of removal, but check that the remote control rods are correctly located in their guides (see illustration).

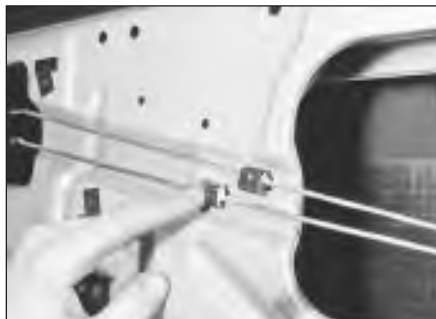

18.5 Remote control rods correctly located in their guides



17.15b Trim panel securing screw at top edge of door pocket

19 Door exterior handle - removal and refitting

Removal

- 1 Remove the door inner trim panel.
- 2 Where necessary for improved access, peel back the waterproof plastic sheet from the door.
- 3 If working on a front door, remove the window channel extension screw from the bottom rear corner of the door, and withdraw the channel through the lower door aperture (see illustration).
- 4 Disconnect the handle operating rod at the lock.
- 5 Remove the two handle securing screws and withdraw the handle and operating rod from the door.


Refitting

6 Refitting is a reversal of removal, but if working on a front door, ensure that the window channel extension is correctly located.

20 Door lock barrel - removal and refitting

Removal

- 1 Remove the door inner trim panel.
- 2 Where necessary for access, peel back the waterproof plastic sheet from the door.

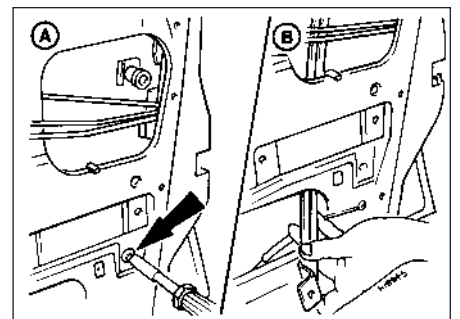

19.3 Front door window channel extension

- A Remove the retaining screw (arrowed)
- B Withdraw the channel through the lower door aperture