

Illustration 1

g01103846

1. Use Tooling (A) in order to install lip seal (58) .
2. Use Tooling (D) in order to install retaining ring (57) .

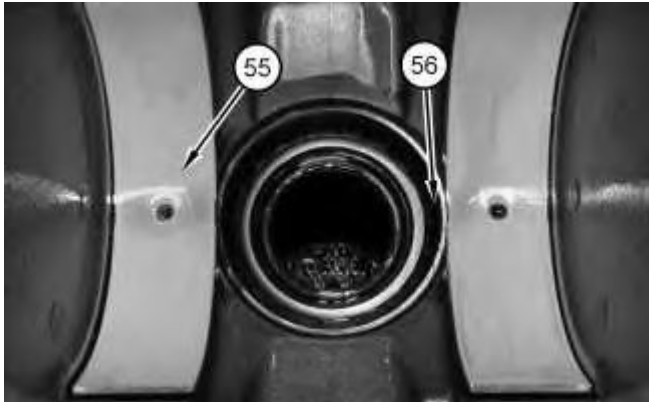


Illustration 2

g01103845

3. Install bearing sleeves (55) and bearing cup (56) .

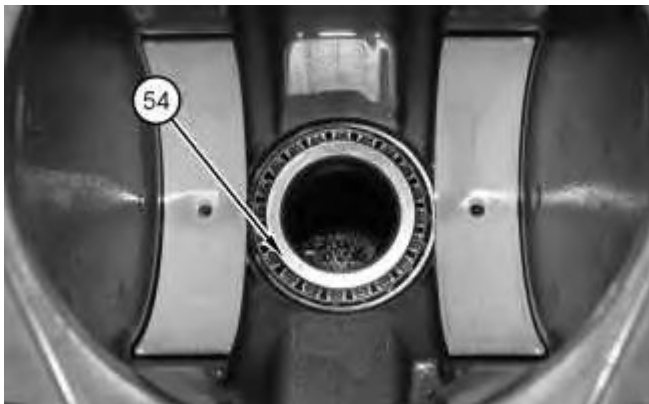


Illustration 3

g01103842

4. Install bearing cone (54) .
-