


1. Turn the fuel supply to the "OFF" position.

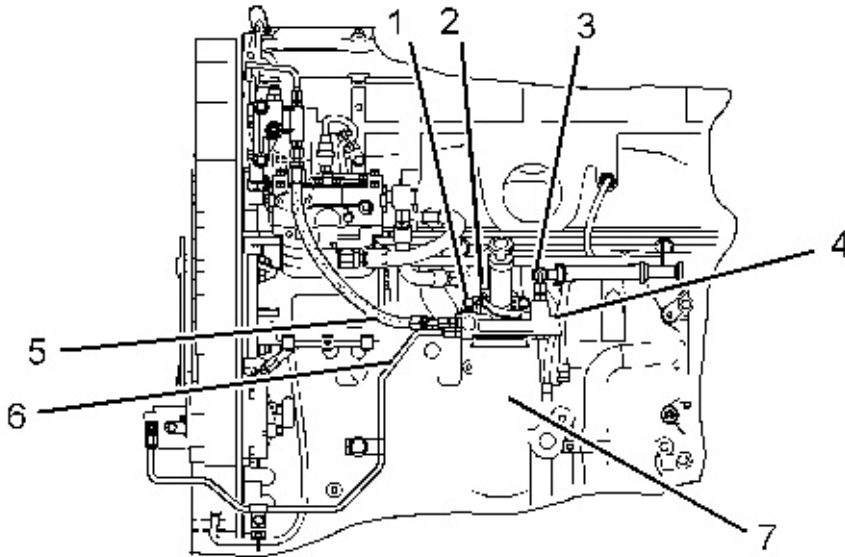

---

Illustration 1

g01080654

2. Disconnect hose assembly (3) from fuel filter base (4) .
  3. Disconnect hose assembly (5) .
  4. Disconnect tube assembly (6) .
  5. Disconnect the harness assembly from fuel pressure sensor (3). Remove the fuel pressure sensor from the fuel filter base.
  6. Use Tooling (A) to remove fuel filter (7) from fuel filter base (4) .
  7. Remove bolts (1) and remove the fuel filter base.
-