


(2/2)

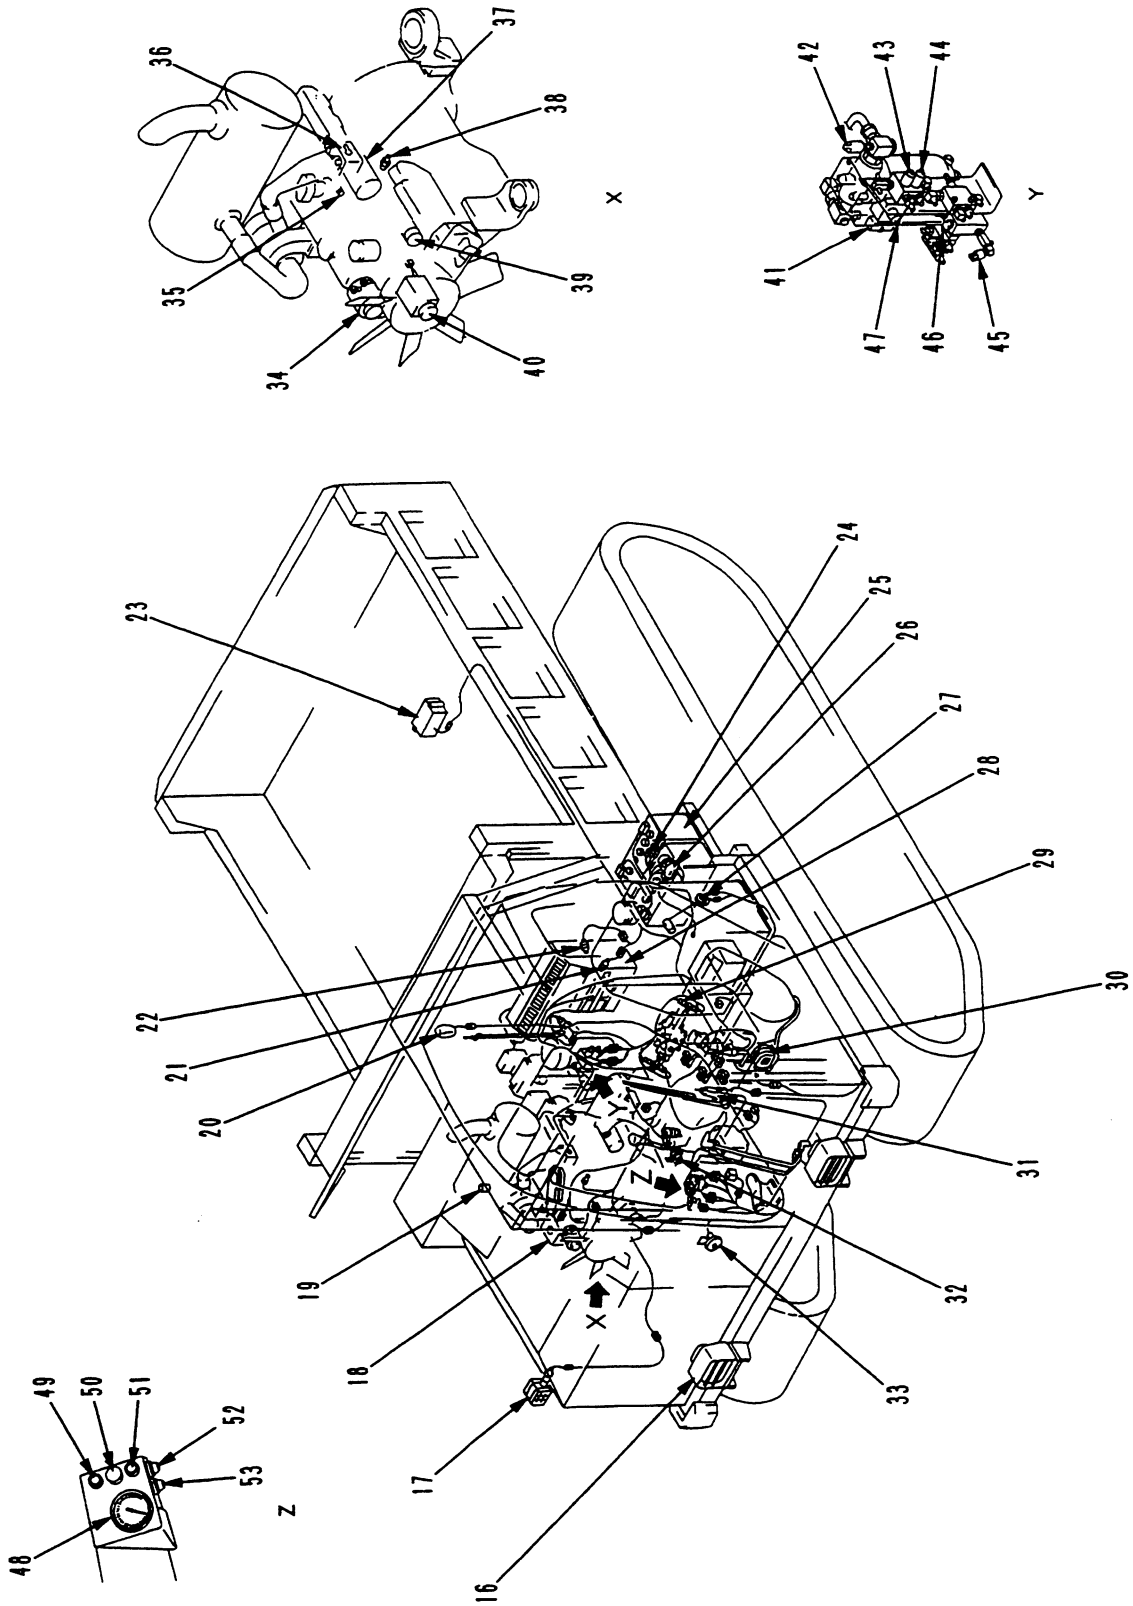

SWZ02247

16. Front lamp
17. Right swing pilot lamp
18. Washer tank
19. Heater relay
20. Room lamp
21. Centering detection proximity switch
22. Reverse travel detection proximity switch
23. Travel alarm
24. Fusible link
25. Battery
26. Battery relay
27. Fuel level sensor
28. Cooler unit (OPT)
29. Swing pressure switch
30. Left swing pilot lamp
31. Wiper motor
32. Fuel electric pump
33. Horn
34. Alternator
35. Coolant temperature sensor
36. Electrical Intake air heater
37. Starting motor
38. Engine oil pressure sensor
39. Engine stop solenoid
40. Airconditioner compressor (OPT)
41. Travel alarm relay
42. HST charge pressure switch
43. PPC lock solenoid valve
44. Swing brake solenoid valve
45. Travel pressure switch
46. Travel speed solenoid valve
47. Emergency stop solenoid valve
48. Tachometer
49. HST charge pressure warning lamp
50. Brake switch
51. Brake pilot lamp
52. Center pilot lamp
53. Reverse travel pilot lamp