




1. Put a strap and a hoist on the scraper control valve (1) and install it in position on the frame.

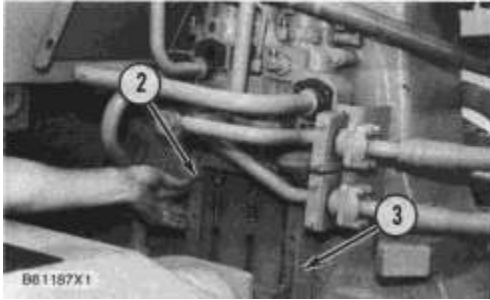


2. Put box assembly (3) in position on the bottom of the scraper control valve. Install the six mounting bolts.
3. Put the linkage assemblies in position on the spools and install pins and cotter pins (2).

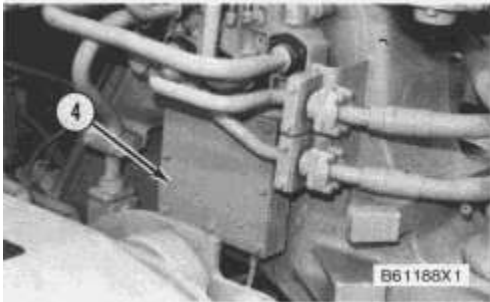

4. Install gasket and cover (4) on box assembly.

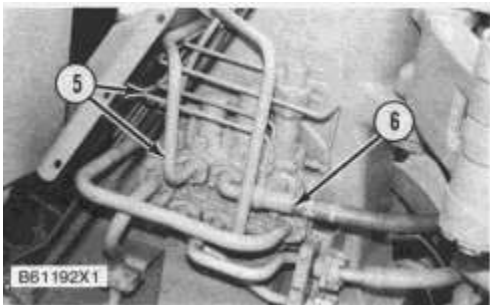

5. Install tube (5) and hose assemblies (6) to their proper locations on the scraper control valve.

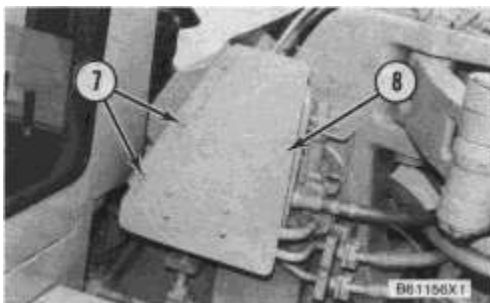

6. Put plate assembly (8) in position and install the bolts (7) and clamps to hold it in place.