

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7573	Link Bracket	1

Start By:

- A. Remove the flywheel. Refer to Disassembly and Assembly, "Flywheel - Remove".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Support the engine with blocks or a suitable lifting device on a flat level surface.



Illustration 3

g00585650

2. Remove the bolt and clamp (1) in order to remove the hose and the clamp from the engine.
-