7. Disconnect fitting (9). Remove fuel return line (10) from the engine.

**Note:** Cap all openings or plug all openings immediately in order to prevent contamination of the fuel system.

## **Installation Procedure**

## **NOTICE**

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

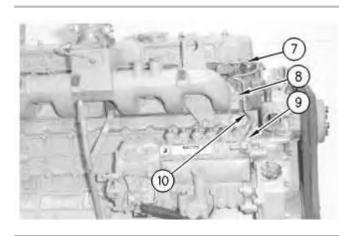


Illustration 5 g00606317

- 1. Place the fuel return line (10) in position on the engine. Connect fitting (9) of the fuel return line to the fuel injection pump.
- 2. Install the washer and bolt (8) through the clamp in order to secure the fuel return line to the inlet manifold.
- 3. Install the fuel return line (10) to the fuel injection nozzles. Secure the fuel return line to the fuel injection nozzle with acorn nuts (7).