


PRESSURE CHANGE TO THE VALVES BY REMOVAL OR ADDITION OF ONE SPACER					
Spacer Part No.	Thickness		Change In		Where Used
	in.	mm	psi	kPa	
(30) 5M9622 5M9623 5M9624	.062 .036 .010	1.57 0.91 0.25	15.6 9.1 2.5	107 63 17	Load Piston (21)
(31) 4B5270	.083	2.11	2.7	19	Converter Outlet Relief Valve (23)
(32) 7M1397 5M3492	.036 .010	0.91 0.25	9.0 2.5	62 17	Converter Inlet Relief Valve (11)
(33) 5M9624	.010	0.25	11.2	78	Priority Valve (8)

Location Of The Pressure Taps And Transmission Testing

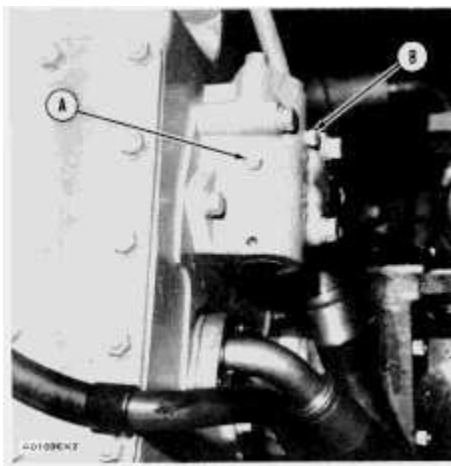

A. Transmission oil pump. B. Speed clutch.