


the buckle in the center, readjust the seat belt.

### Shortening the Seat Belt

---

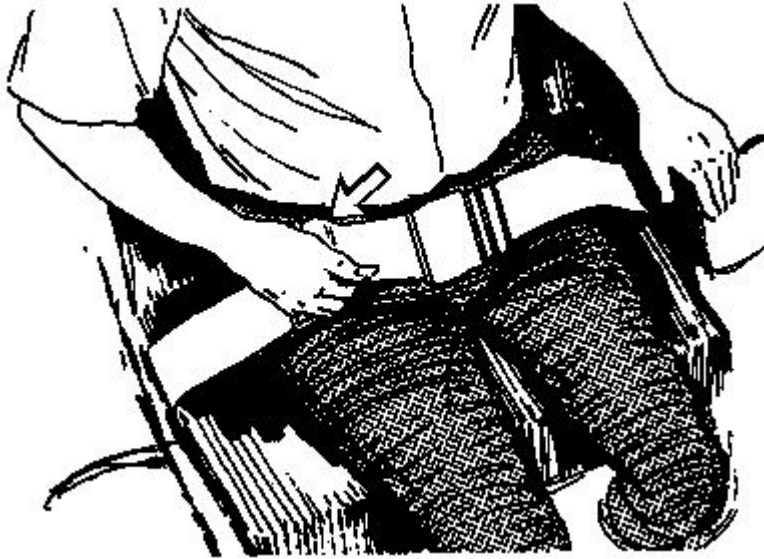

---

Illustration 3

g00100713

1. Fasten the seat belt. Pull out on the outer belt loop in order to tighten the seat belt.
2. Adjust the other half of the seat belt in the same manner.
3. If the seat belt does not fit snugly with the buckle in the center, readjust the seat belt.

### Fastening The Seat Belt

---