


ELECTRICAL SYSTEM / Component Location

COMPONENT LOCATION

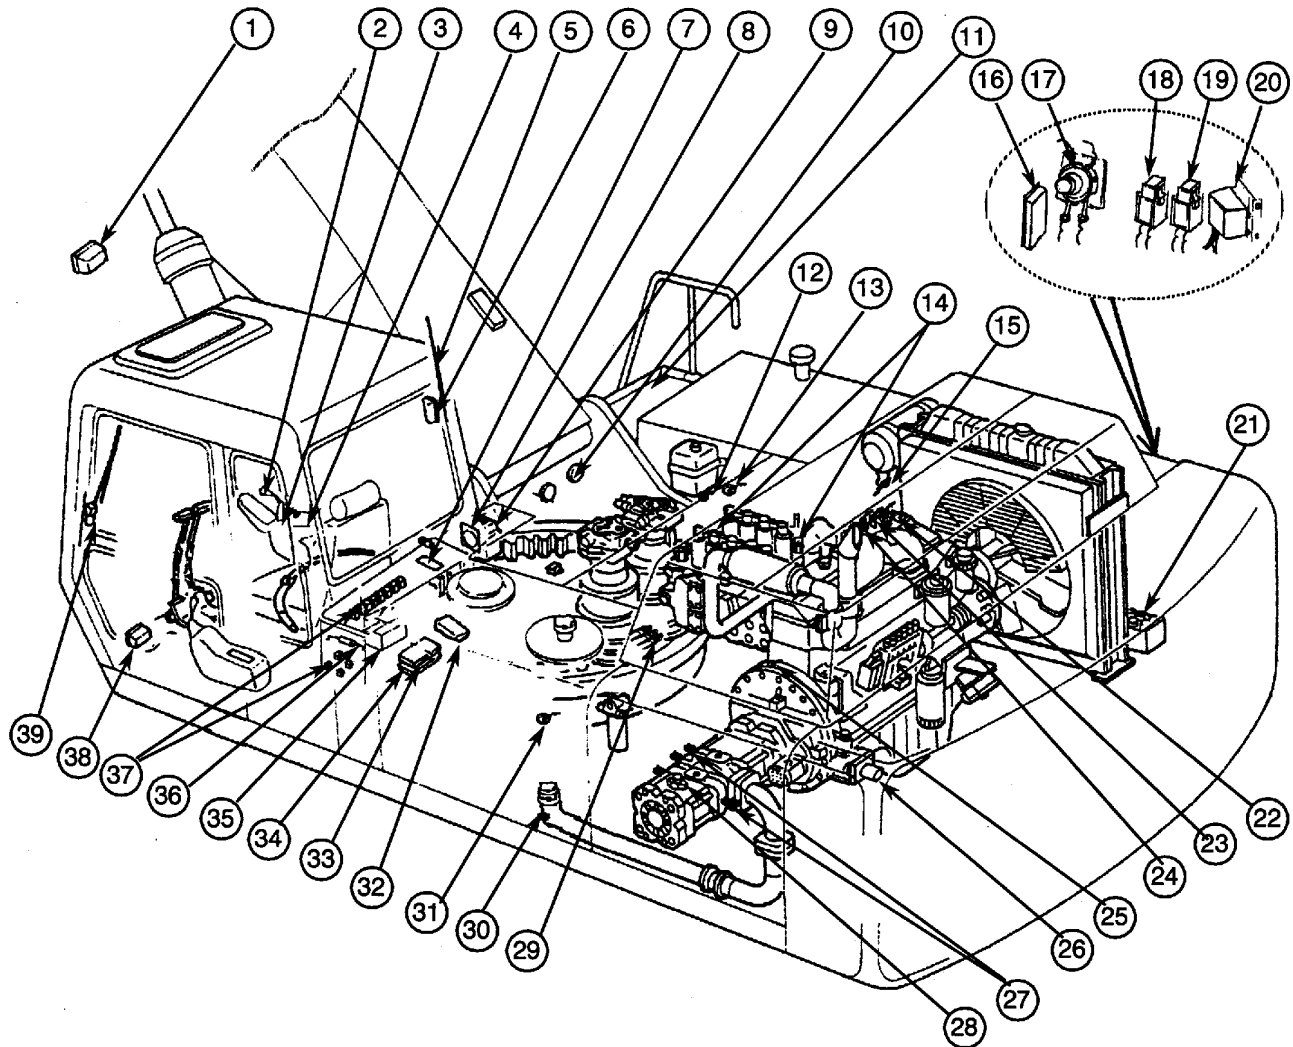

T111-04-01-001

1— Work Light (Boom)	11— Work Light	21— Battery	31— Hydraulic Oil Level Switch
2— Power Boost Switch	12— Coolant Level Switch	22— Coolant Temperature Sensor	32— Monitor Controller
3— Key Switch	13— Fuel Level Sensor	23— Overheat Switch (H)	33— Engine Controller (EC)
4— Cigar Lighter	14— Differential Pressure Sensors (DP sensor)×2	24— Overheat Switch (L)	34— Pump and Valve Controller (PVC)
5— Antenna	15— Air Filter Restriction Switch	25— Engine Speed Sensor (N sensor)	35— Heater
6— Dome Light	16— Emergency Relay	26— Engine control motor (EC motor)	36— Preheat Resistance
7— Fuse Box	17— Battery Relay	27— Pump Pressure Sensors (P sensor)×2	37— Relays
8— Speaker (Radio)	18— Fusible Link	28— Pump Displacement Angle Sensors (A sensor)×2	38— Work Light
9— Washer	19— Fusible Link	29— Solenoid Valve (3-Spool)	39— Wiper
10— Horn	20— Starter Relay	30— Hydraulic Oil Temperature Sensor	