


- 14 - Boom Hose
- 15 - Swing Hose

Disconnect pilot control hose connections (4—15).

NOTE:

Cap and plug pilot control valve and hoses using 62H1028 and 62H1029 STC Plugs, and 62H1036 and 62H1035 Caps. Order caps and plugs through your authorized dealer.

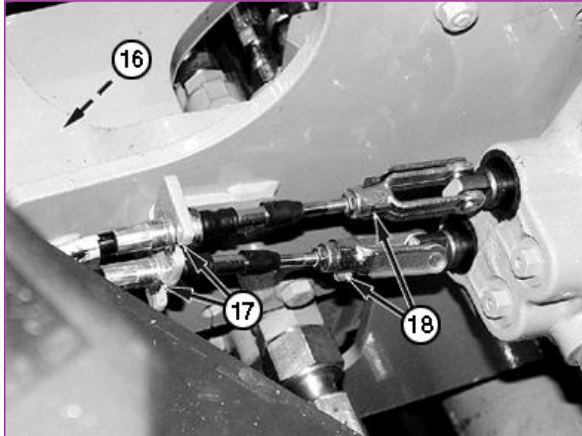

9. TX1019026A-UN: Stabilizer Valve Leakage

LEGEND:

- 16 - Auxiliary Flow Control Solenoid Wire Connector (if equipped)
- 17 - Retainer Clips
- 18 - Spring Pins

Remove spring pins (18).

10. Remove retainer clips (17) and remove linkage cables.
11. Disconnect auxiliary flow control solenoid wire connector (16) (if equipped).



12. TX1019027A-UN: Front Console Cover

LEGEND:

- 19 - Vent Panel
- 20 - Switch Panel

Remove panels (19 and 20).