

TM1886 - 310G Backhoe Loader

Pilot Control Tower Repair (optional)

Pilot Control Tower Repair (optional)

Pilot Control Tower Remove and Install


1. Park machine on level surface. Lower backhoe bucket, stabilizers, and dipperstick to floor.



CAUTION:

Avoid injury from escaping fluid under pressure, stop engine and relieve the pressure in the system before disconnecting hydraulic lines or hoses. Tighten all connections before applying pressure.

2. Stop engine and operate all hydraulic control levers to system pressure.
3. Stop engine and turn key on. With pilot enable switch in on position, operate pilot control levers to relieve pressure in hydraulic system.
4. Drain or apply vacuum to reservoir. [See 310G Backhoe Loader Drain and Refill Capacities](#) . (Operator's Manual.)
5. Raise rear windows.

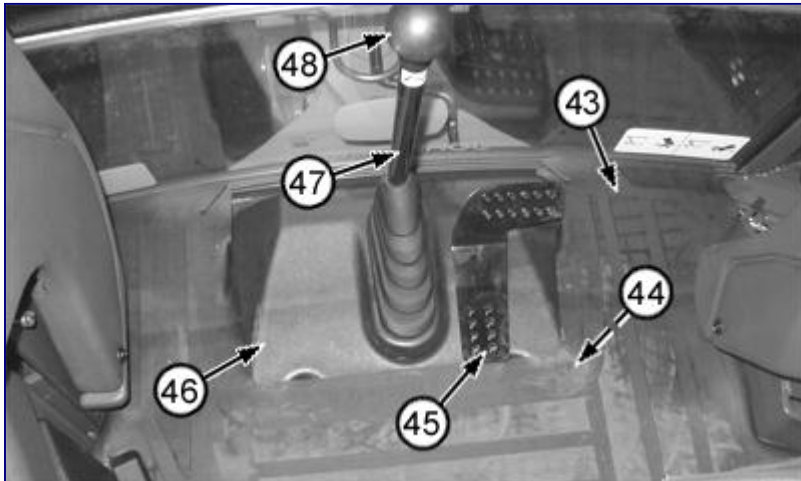

6. T189398B-UN: Backhoe Boom Lock Lever

LEGEND:

43 - Floor Mat
 44 - Floor Plate
 45 - Foot Pedals (if equipped)
 46 - Console Cover
 47 - Backhoe Boom Lock Lever
 48 - Knob

Remove rear floor mat (43).

7. Remove foot pedal (45).
8. Remove boom lock control lever knob (48).
9. Remove console cover mounting cap screws.