

4. Use a suitable press in order to remove retaining ring (11) and lock (12) .
5. Remove housing (13) .
6. Remove the O-ring seal from housing (13) .

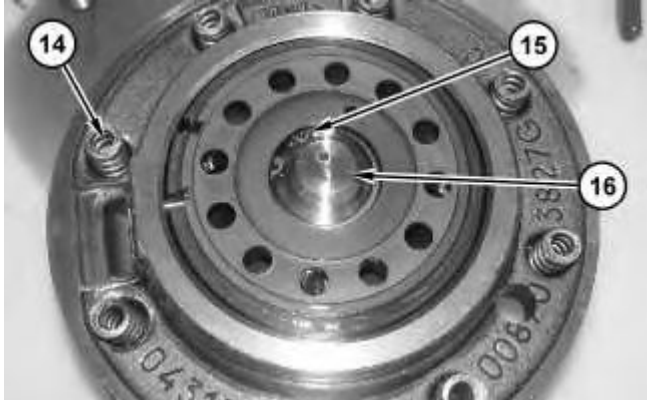


Illustration 5

g01326444

 **WARNING**

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

7. Remove springs (14) .
 8. Use Tooling (A) in order to remove retaining ring (15) .
 9. Remove speed control valve group (16) .
-