

REPAIR INSTRUCTIONS - ON VEHICLE

INTAKE MANIFOLD COVER REPLACEMENT

Removal Procedure

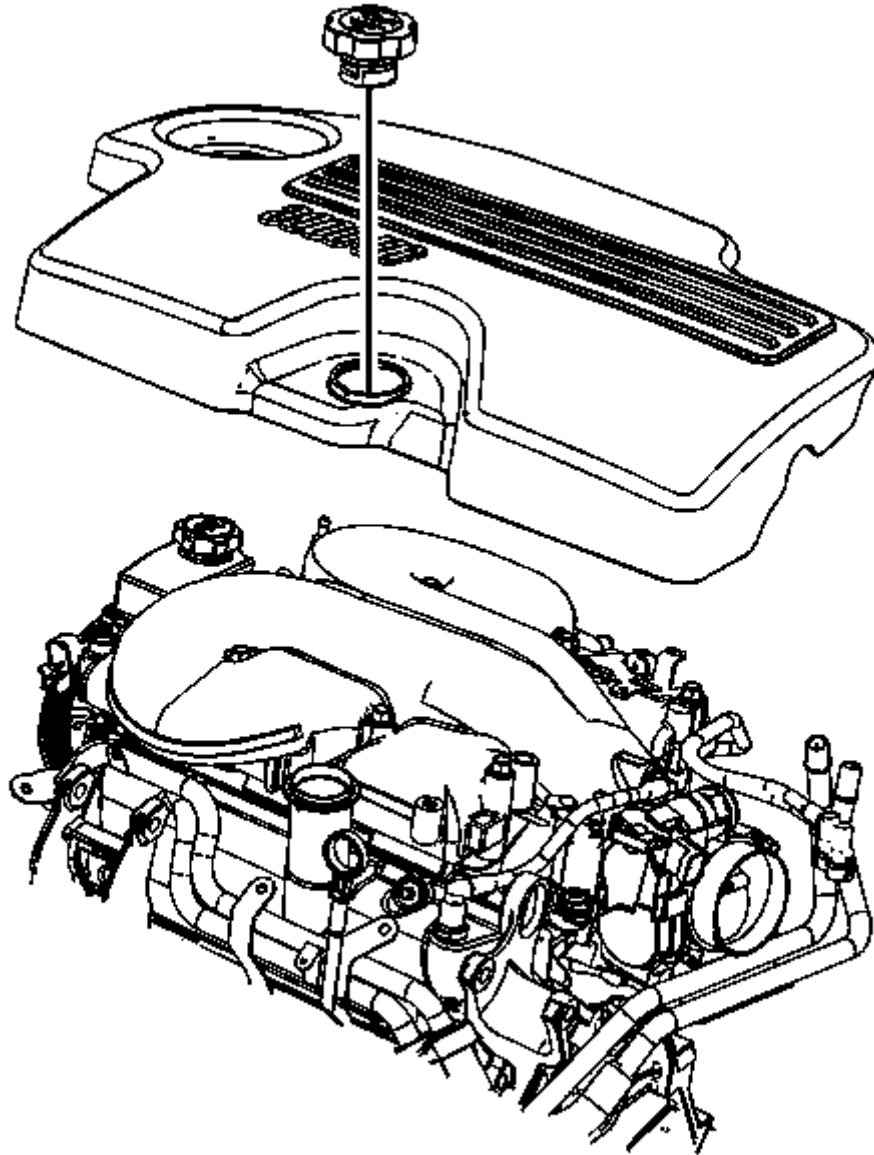


Fig. 6: Identifying Engine Manifold Cover
Courtesy of GENERAL MOTORS CORP.

1. Remove the engine oil fill cap.
2. Remove the oil fill pipe.
3. Pull up on the cover in order to disengage the cover from the studs.

Installation Procedure

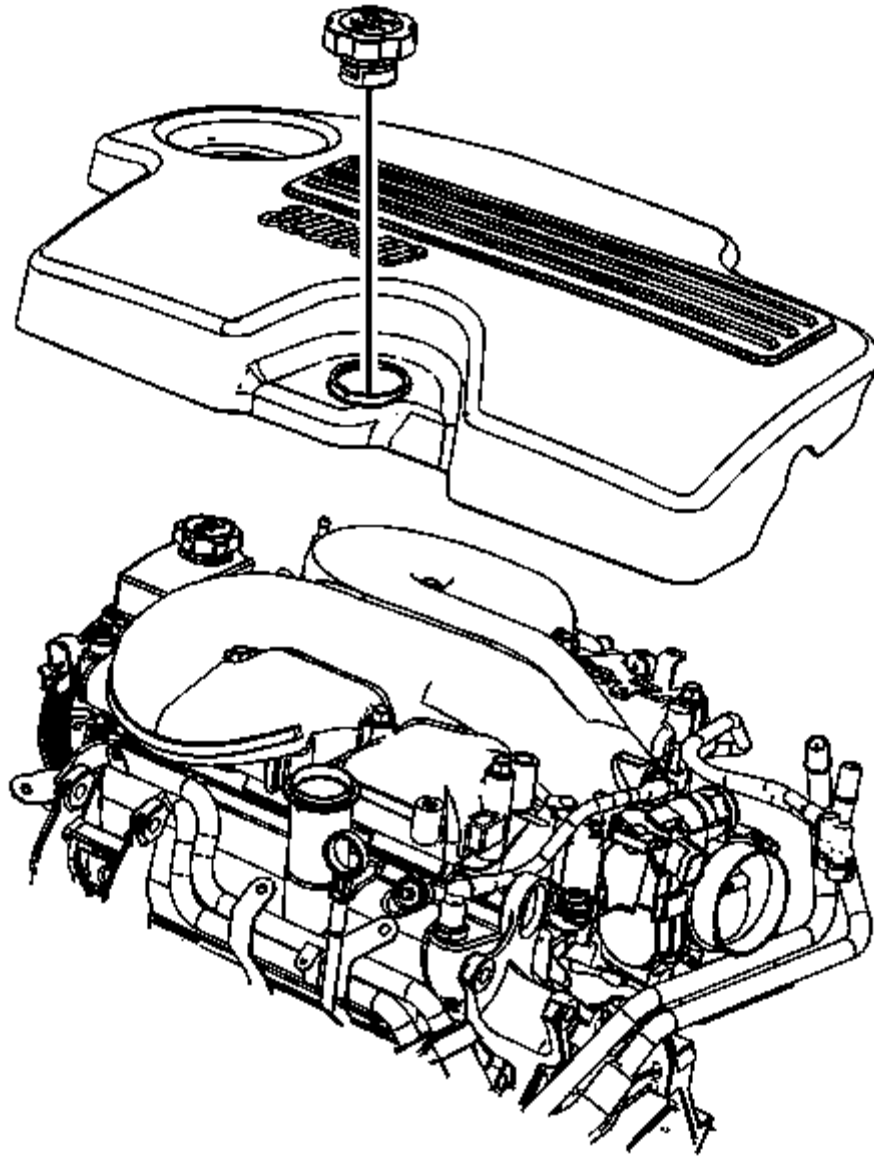


Fig. 7: Identifying Engine Manifold Cover
Courtesy of GENERAL MOTORS CORP.

1. Align the cover to the studs on the engine, push down on the cover above the studs in order to engage the cover to the studs.
2. Install the oil fill pipe.

3. Install the engine oil fill cap.

DRIVE BELT REPLACEMENT

Removal Procedure

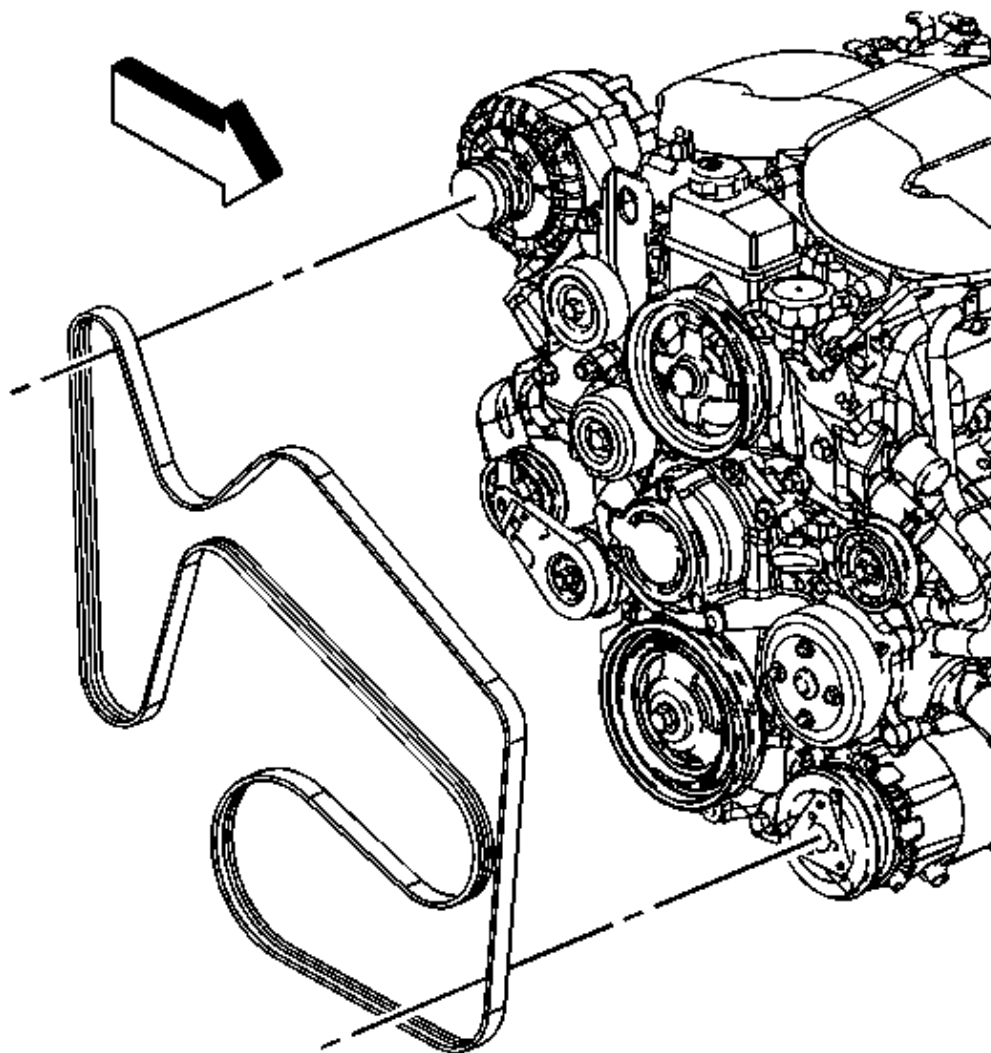


Fig. 8: Identifying Drive Belt Routing
Courtesy of GENERAL MOTORS CORP.

1. Rotate the drive belt tensioner clockwise in order to release the tensioner spring tension.

2. Remove the drive belt.

Installation Procedure

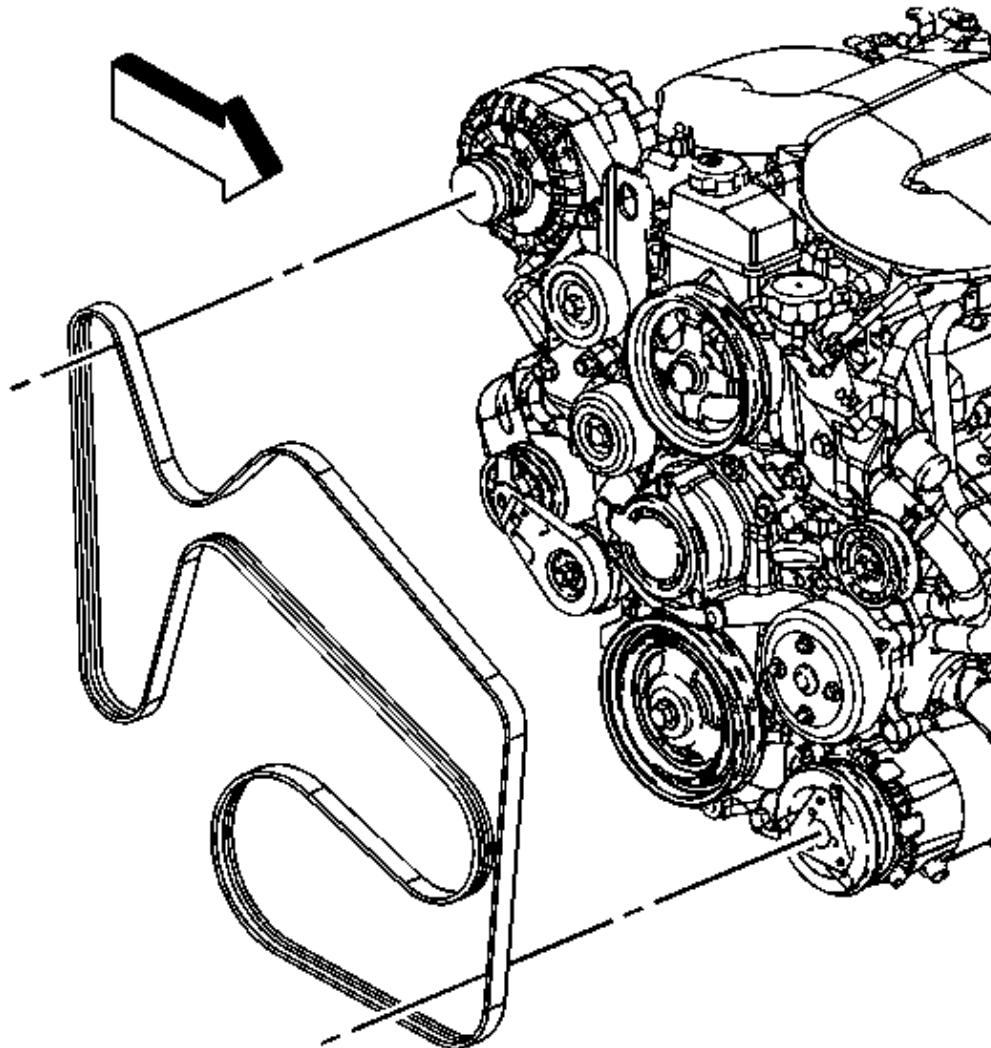


Fig. 9: Identifying Drive Belt Routing
Courtesy of GENERAL MOTORS CORP.

1. Rotate the drive belt tensioner clockwise in order to release the tensioner spring tension.
2. Install the drive belt.

DRIVE BELT IDLER PULLEY REPLACEMENT

Removal Procedure

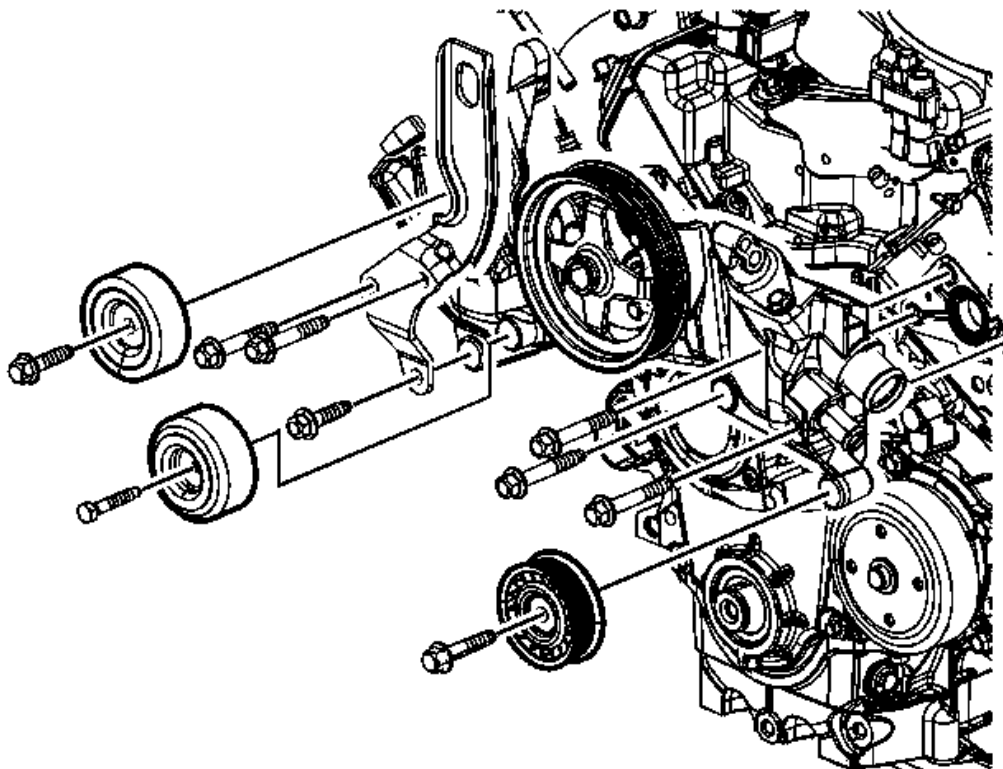


Fig. 10: View Of Drive Belt Idler Pulleys
Courtesy of GENERAL MOTORS CORP.

1. Remove the drive belt. Refer to **Drive Belt Replacement**.
2. Remove the required drive belt idler pulley bolt.
3. Remove the drive belt idler pulley.

Installation Procedure