

Accumulator - Remove and Install

SMCS - 4263-010; 4331-010; 5077-010; 7336-010

Removal Procedure

1. Release the hydraulic system pressure. Refer to Disassembly and Assembly, "System Pressure - Release".
2. Open the right side door.

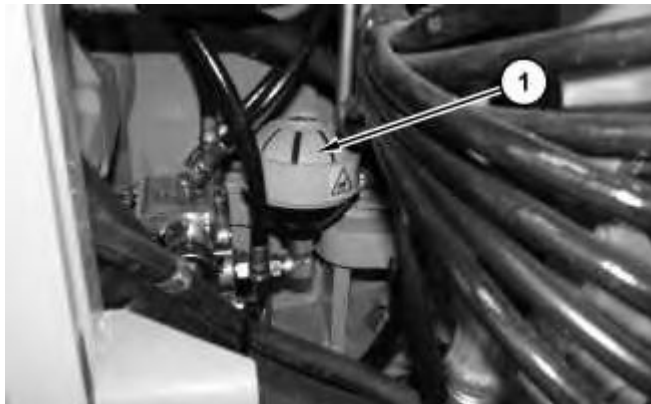


Illustration 1

g01458924

3. Remove accumulator (1) .

Installation Procedure

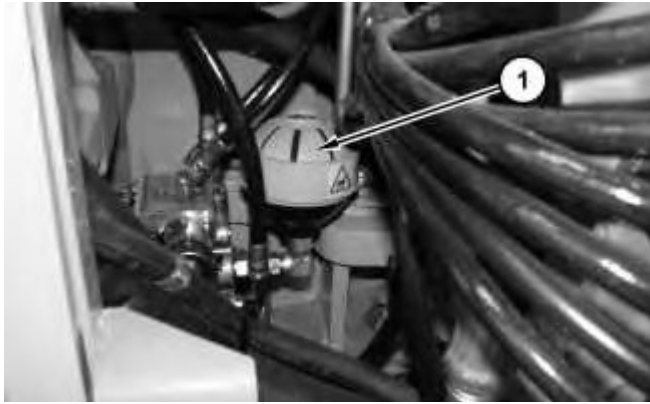


Illustration 2

g01458924

1. Install accumulator (1) .
 2. Close the right side access door.
-