

5 Supply pump installation angle verification



Q007018E

1. Verify the supply pump installation position with the timing mark.

Standard:


The position of each timing mark matches.

Unsatisfactory

Install the supply pump in the correct location.

Satisfactory

6 DTC reverification

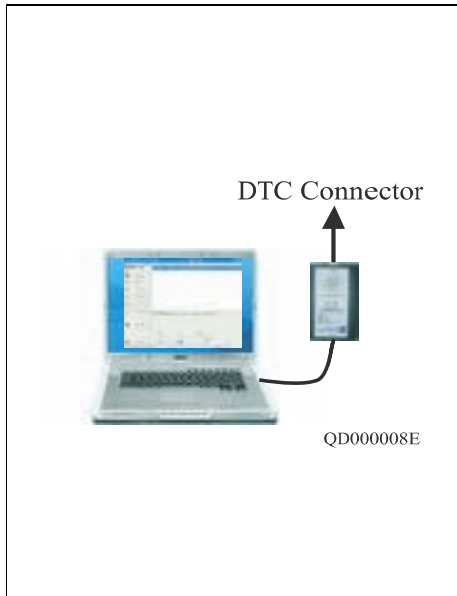

1. Erase any DTCs, and conduct a reoccurrence test.
Check whether the same code is outputted again.

Standard: The same DTCs are not detected.

< ATTENTION >

Operate the accelerator pedal using each piece of information as a hint. Change environmental conditions, and try to make the malfunction reoccur. (In addition, refer to "3.3 Actions for Non-Reoccurring Malfunctions" [P7].)

Satisfactory

Normal

Unsatisfactory