


Fresh Air Filter Remove and Install


NOTE:

The fresh air filter is located inside left console.

1.

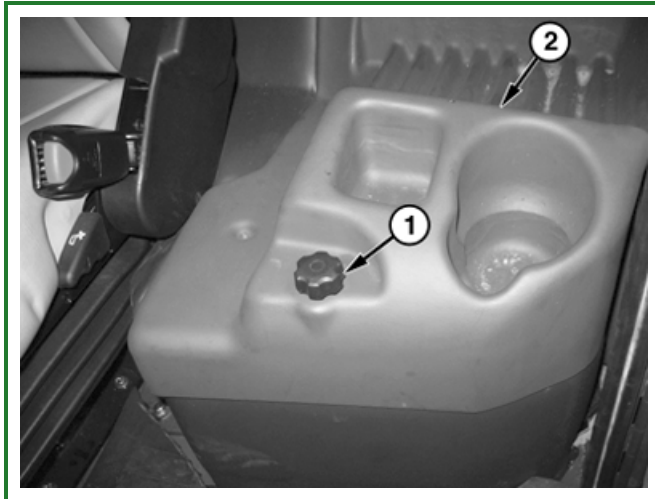

TX1037230A-UN: Console Tray

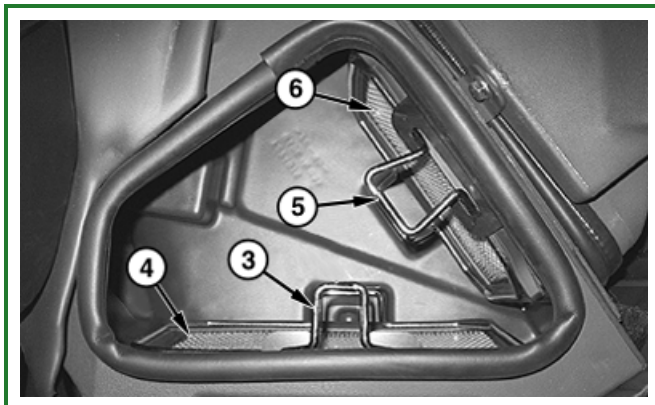

TX1037231A-UN: Air Filters

LEGEND:

- 1 - Knob
- 2 - Console Tray
- 3 - Recirculating Air Filter Retainer
- 4 - Recirculating Air Filter
- 5 - Fresh Air Filter Retainer
- 6 - Fresh Air Filter

Remove knob (1).

2. Remove console tray (2).

3. Remove fresh air filter retainer (5).

4. Remove fresh air filter (6).

5.

⚠ CAUTION:

Prevent possible injury from flying debris. Reduce compressed air to less than

210 kPa (2 bar) (30 psi) when using for cleaning purposes. Clear area of bystanders, guard against flying chips, and wear personal protection equipment, including eye protection.

Clean filter in one of these ways:

- Tap filter on a flat surface with the dirty side down.
- Use compressed air opposite to the normal air flow.
- Wash filter in warm, soapy water. Flush filter and let it dry before using the air conditioner.

6. Install fresh air filter.

7. Install retainer.

8. Install console tray and secure with knob.

Go to [Section_18:Group_1830](#)

MH66O88,000092A-19-20080225