


Apply Vacuum to Hydraulic Oil Tank

1. Prepare machine for service. [See Park and Prepare for Service Safely](#) . (Group 0001.)
2. Turn battery disconnect switch to OFF.
3. Relieve hydraulic oil pressure. [See Hydraulic Oil Tank Pressure Release Procedure](#) . (Group 9025-25.)
4. Remove hydraulic tank cap (1) on top of hydraulic tank (2).

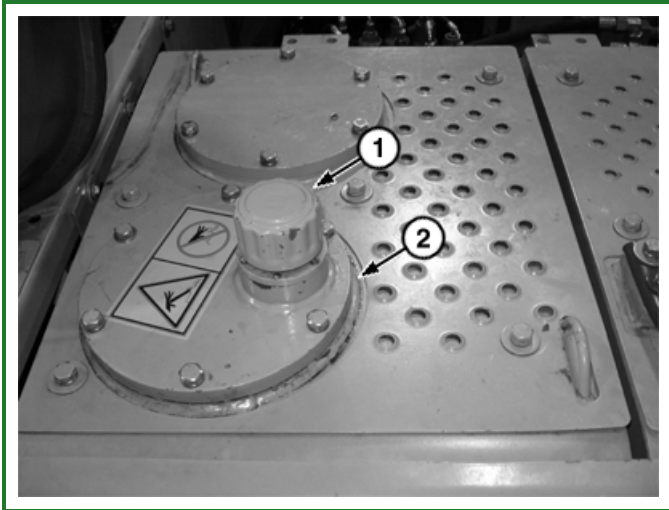


TX1072533A-UN: Hydraulic Tank — Top View

LEGEND:

- 1 - Hydraulic Tank Cap
- 2 - Hydraulic Tank

5.

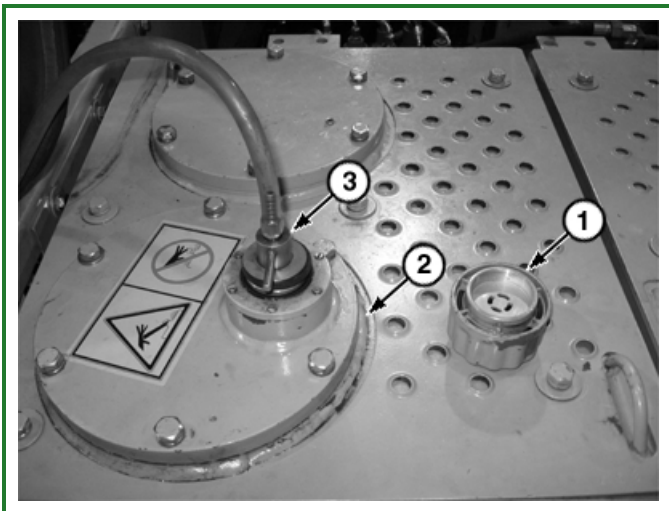

TX1072535A-UN: Hydraulic Vacuum Connected to Tank

LEGEND:

- 1 - Hydraulic Tank Cap
- 2 - Hydraulic Tank
- 3 - Vacuum Cap and Hose

Assemble fittings and hydraulic oil tank adapter from D15032NU vacuum pump kit, and JT0705A vacuum pump set.

6. Install vacuum cap and hose into hydraulic tank opening as shown. Refer to pump instructions for operating information.

7. Perform hydraulic system service.
8. Remove fittings and hydraulic oil tank adapter.
9. Check hydraulic oil level. [See Check Hydraulic Oil Level](#) . (Operator's Manual).
10. Return to service.

Go to [Section_33:Group_3360](#)

AP63882,000005C-19-20100614