



INVESTIGATOR II WARNING SYSTEM CIRCUITS

RW11025

LEGEND FOR INVESTIGATOR II WARNING SYSTEM CIRCUITS

- 1—Monitor Warning Horn
- 2—Monitor Harness-to-Control Support Power Harness Connector. Located Under Cowl (See Number 19 on CONTROL SUPPORT POWER CIRCUITS for Continuation of Harness)
- 3—Monitor Harness-to-Back of Tachometer Connector
- 4—"STOP" Engine Lamp
- 5—Ground Speed Magnetic-Pick-Up Sensor
- 6—Transmission Lube Pressure Sender
- 7—PTO Speed Magnetic-Pick-Up Sensor
- 8—Monitor Harness to Back of Monitor Harness
- 9—Fuel Level Sender
- 10—Transmission Pressure Sender
- 11—Transmission Pressure Override Switch
- 12—Hydraulic Oil Temperature Sensor
- 13A—Transmission Oil Filter Restriction (Service Alert)
- 13B—Transmission Oil Filter Restriction ("STOP" Engine)
- 14—Engine Oil Pressure Sender
- 15—Engine Speed Magnetic-Pick-Up Sensor
- 16—Coolant Temperature Sender
- 17—Head Temperature Switch (Non-Current Production)
- 18—Transmission Front Sensor Harness-to-Engine Sensor Harness Connectors (Located in Upper Engine Compartment by Firewall)
- 19—Service Alert Warning
- 20—Control Support Monitor Harness
- 21—Monitor System Ground-to-Engine Power Harness Connector. Located Upper Engine Compartment by Firewall (See Number 23 on FRONT POWER CIRCUITS for Continuation of Harness)
- 23—Transmission Rear Sensor Harness
- 25—Clutch Temperature Sensor (Non-Current Production)
- 26—Jumper Wire
- 27—Transmission Front Sensor Harness-to-Transmission Rear Sensor Harness Connectors. Located L.H. Side of Torque Divider Housing

U95;095040 AUX2 260285