

## Pin Disconnect Valve Remove and Install—If Equipped

1. Park And Prepare For Service Safely . (Group 0001.)

- 2.


**⚠ CAUTION:**

*To avoid injury from escaping fluid under pressure, stop engine and relieve the pressure in the system before disconnecting or connecting hydraulic or other lines. Tighten all connections before applying pressure.*

Relieve hydraulic system pressure. See [Hydraulic System Pressure and Accumulators Discharge](#) . (Group 9025-25.)

3. Turn battery disconnect switch to OFF position.

- 4.

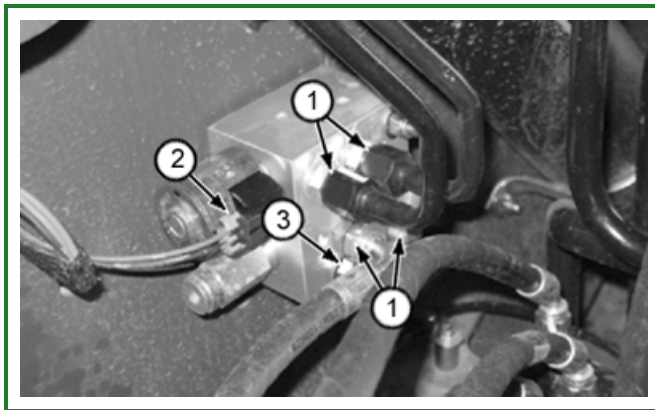

**TX1048327A-UN: Pin Disconnect Valve**

**LEGEND:**

- 1 - Hydraulic Lines (4 used)
- 2 - Wire Connector
- 3 - Nut (2 used)

Tag and disconnect hydraulic lines (1). Cap and plug all hoses and openings.

5. Tag and disconnect wire connector (2).
6. Remove pin disconnect valve.
7. Clean and inspect parts. Repair or replace parts as necessary. See [Pin Disconnect Valve Disassemble and Assemble—If Equipped](#) . (Group 3160.)
8. Install pin disconnect valve.
9. Install nuts and tighten securely.
10. Connect hydraulic lines.
11. Install wire connector.
12. Turn battery disconnect switch to ON position.

13. Remove frame articulation lock bar.

Go to [Section\\_31:Group\\_3160](#)

RM58335,0000FAB-19-20101014