
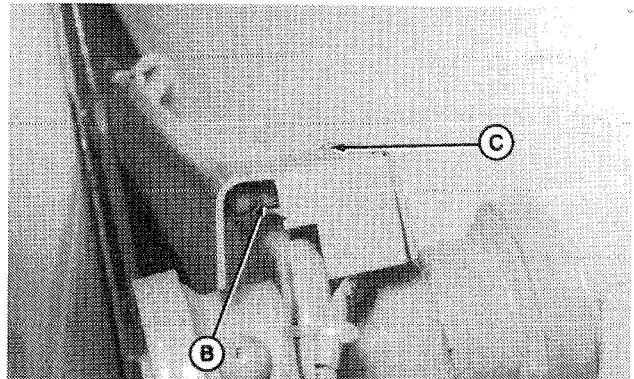


### ADJUST LOADER BUCKET RETURN-TO-DIG

Position loader bucket flat on the ground or at any desired bucket cutting angle. Adjust rod (A) until the rod pushes in the lever of the return-to-dig switch (B) and a "click" sound is heard. If the "click" sound is not heard and the rod is pushing on the lever, adjust the return-to-dig switch mounting (C) until the "click" is heard.

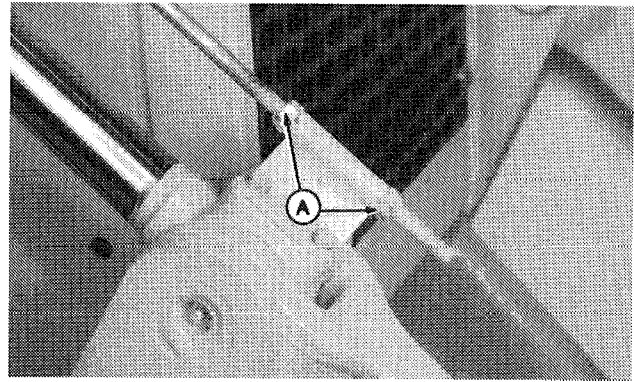


6AQ;T92111, T92105 T59;9030 10 290783

### ADJUST LUMBER FORK TINES

The tines on the fork may be adjusted from 1775 mm (70 in.) to 380 mm (15 in.)

To adjust tines, remove collar from shaft (A) and pull shaft out. Place spacers on either side of tire to obtain desired position.

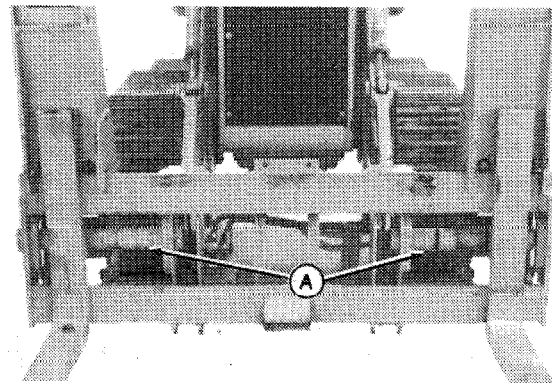


6AQ;T92106 T59;9030 11 290783

### ADJUST RIPPER TEETH

Three teeth are furnished with the ripper as regular equipment; however, one to five teeth may be used depending on application.

Teeth can be set in three depth positions: 177.8, 216, or 254 mm (7, 8-1/2, or 10 in.).


To adjust height pull the shank lock from the main frame, raise or lower the shank to one of the other notches and insert shank lock behind the tooth.

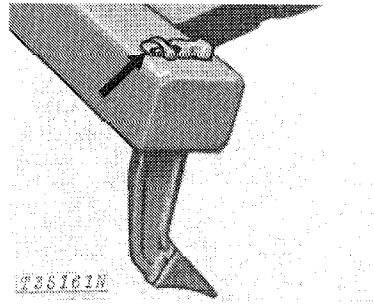

6AQ;T35161 T59;9030 12 290783

### ADJUST SEAT

To move the seat forward or rearward, remove the seat cushion and the four nuts and cap screws attaching the seat frame to the seat support bracket. Place the seat frame in desired adjustment holes (1) and reinstall cap screws and nuts.

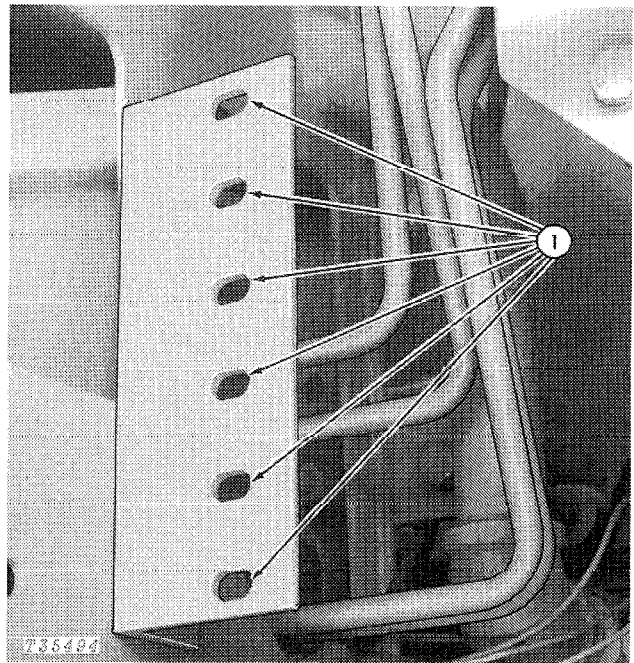

6AQ;T35494 T59;9030 13 290783