


Frame


5. Attach chains and hoist to bracket.
6. Remove rear mounting bracket.

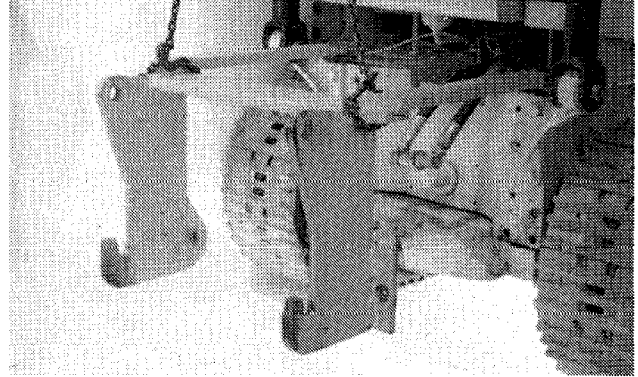

7AP;T92982 T57;4240 04 190783


INSTALL REAR MOUNTING BRACKET

1. Install chain and hoist and slowly move bracket in place.

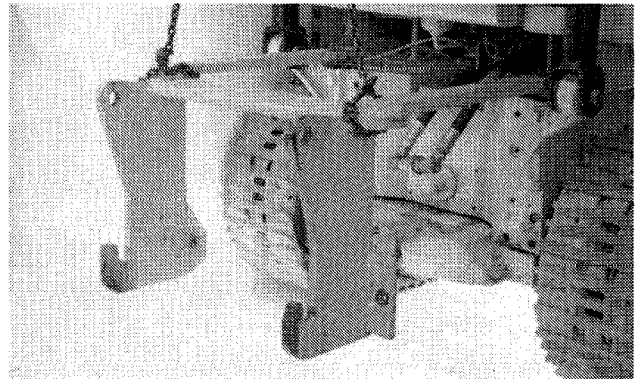


7AP;T92982 T57;4240 05 190783

2. Install pin (A) from inside and drive through, raising bracket up slightly on both sides.
3. Install two washers and cap screws (B) on both sides. Tighten cap screws.

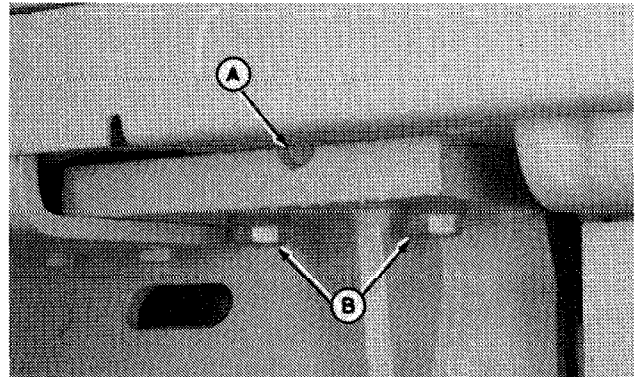

7AP;T92981 T57;4240 06 190783

4. Install two washers and cap screws (A) on both sides. Tighten cap screws.

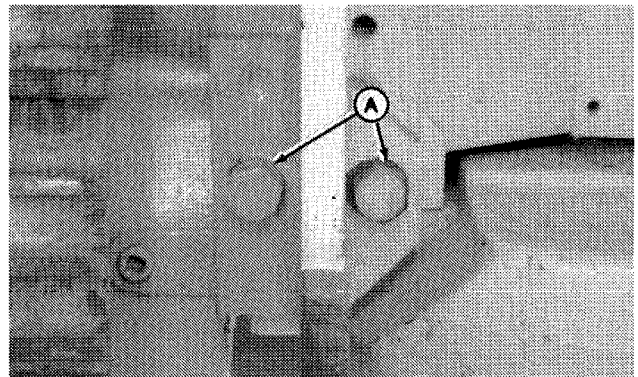

7AP;T92980 T57;4240 07 190783

SERVICE EQUIPMENT AND TOOLS

NOTE: Order tools from your SERVICE-GARD™ Catalog. Some tools may be available from a local supplier.

Name	Use
Bushing, Bearing, and Seal Driver Set	Install wiper seal
Spanner Wrench	Cylinder guide nut

T58;4260 6001GA 261184

OTHER MATERIALS

Number	Name	Use
PT569	John Deere NEVER-SEEZ™ Lubricant	Apply to cylinder bushings and rod guide threads.

Never-Seez is a trademark of the Never-Seez Compound Corp.

T58;4260 04 240883

SERVICE PARTS KIT

Ripper Cylinder Repair Kit.

T58;4260 03 240883

SPECIFICATIONS

Item	Measurement	Specification
Piston Nut-to-Cylinder Rod	Torque	815—950 N·m (600—700 lb-ft)
Rod Guide Nut	Torque	340—407 N·m (250—300 lb-ft)

T58;4260 6001GB 261184