


3. Lower the arm assembly (A) while raising suspension frame (B) and separate the upper end of shock absorber (C) from its mounting (D).

4. Move shock absorber upward to disengage the shaft (E) from links (F).

5. Remove shock absorber.

6. Remove attaching screws for further disassembly.


7. Bushing (G) can be replaced with the suspension assembled.

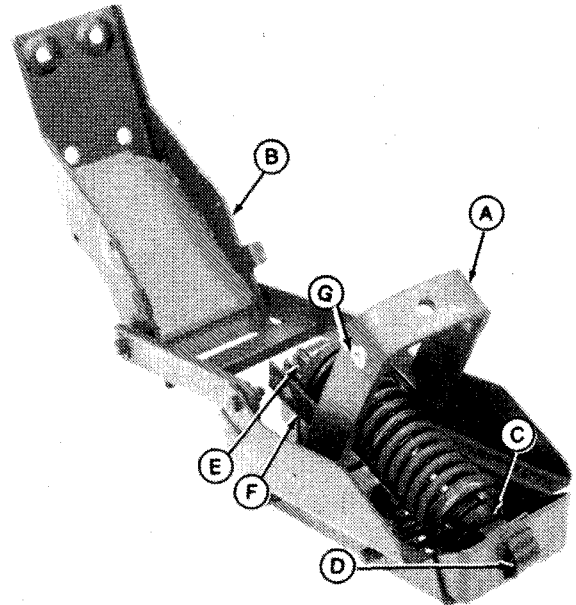

- A—Arm Assembly
- B—Suspension Frame
- C—Shock Absorber
- D—Shock Absorber Mounting
- E—Shock Absorber Shaft
- F—Shock Absorber Links
- G—Bushings

AG9;RW7321 U90;090015 PX2 010682

8. Remove suspension arm assembly bushings using No. 27487 Driver with No. 27497 Disk.

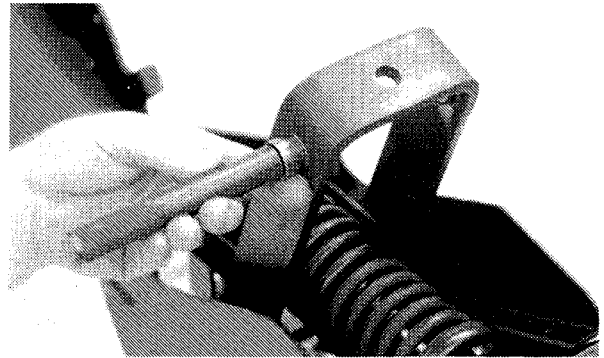


AG9;RW7322 U90;090015 QX2 010682

9. If necessary remove rubber bushings (A) on shock absorber (B) by removing retaining rings and prying off.

10. Replace rubber bushings by pushing onto shaft and replace retaining rings.


*NOTE: If rubber bushings or retaining rings are difficult to install, use a press to compress rubber bushings.*

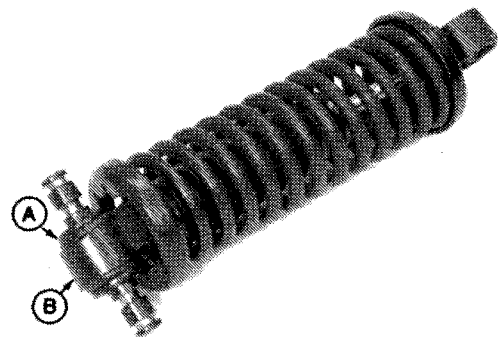

AG9;RW7323 U90;090015 RX2 010682

11. Use Shock Absorber Spring Compressor (See Fabricated Tools, Section 99) to compress shock absorber spring enough to allow rotation of lower mounting ring (C).


12. Carefully loosen compression tool nuts (B) and remove spring from shock absorber (A).

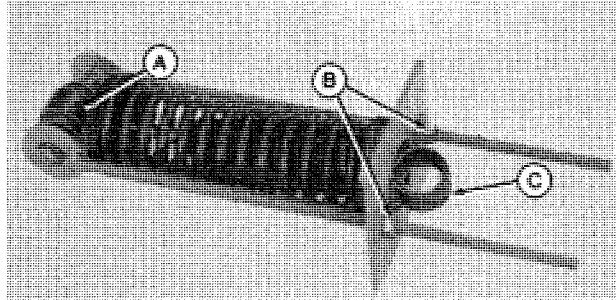

AG9;R28463 U90;090015 SX2 260983

13. Examine spring (A) for cracks or breaks, replace as required.


14. Replace shock absorber (B) if it does not offer acceptable resistance to both compression and extension when held vertically with shock absorber body down.

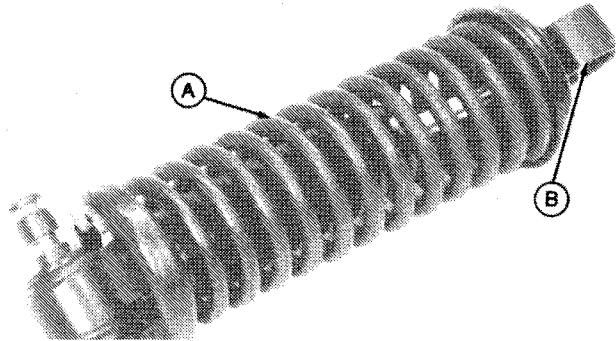

AG9;RW7324 U90;090015 TX2 010682

## ASSEMBLE DELUXE SEAT SUSPENSION

1. Assemble deluxe seat suspension by reversing disassembly procedures, install seat support assembly and install seat.

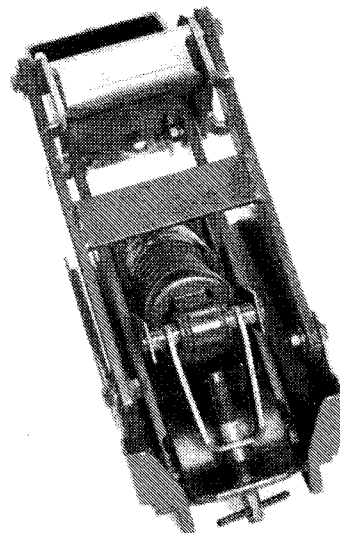

AG9;RW7325 U90;090015 UX2 010682